



Notes:

1. 4-20mA Output on Ch.1 and/or Ch.2 requires the COM / 24VDC - connection to be connected to both the power source *AND* to the 4-20mA - (Negative) connection at the TXP Controller or PLC. Please review the TXP-T40 instruction manual for more details