



TracXP™ TXP-WCR

Wireless Controller Receiver

Instruction Manual



IMPORTANT: Read and understand contents of this manual prior to operation. Keep these user instructions for reference.

1	Safety Information.....	5
1.1	Read Before Installation and Operation.....	5
1.2	WARNINGS	6
2.1	Introduction.....	7
2.2	Key Features	7
2.3	Specifications.....	7
2.3.1	Power Input	7
2.3.2	Standard Output.....	8
2.3.3	Accuracy	8
2.3.4	Display	8
2.3.5	Ambient temperature.....	8
2.3.6	Temperature Drift.....	8
2.3.7	Humidity Range	8
2.3.8	Altitude	8
2.3.9	Housing / Installation Categories	8
2.3.10	Relays.....	8
2.4	Description of TXP-WCR Client / Server Wireless Networks.....	9
3	Product Description.....	10
3.1	System Diagrams	10
3.1.1	External System Diagram.....	11
3.1.2	Internal system Diagrams.....	12
3.1.3	Assembly Diagram	14
3.2	TXP-WCR Controller Description	15
3.3	Data Display Screens	17
3.3.1	EUNIT/BAR Graph Screen and Comm Error Timeline.....	17
3.3.2	Alarms Status Clear Screen.....	18
3.3.3	Channel Alarm Status Screen	18
3.3.4	Event Log Screen	19
4	Operating Instructions.....	20
4.1	Operator Interface.....	20
4.2	Setup Menu Configuration	20
4.3	Changing Menu Variables Using the Keypad.....	22
4.4	Main Menu	22
4.5	Channel Config Menu Group.....	23
4.5.1	Channel Active	23
4.5.2	Remote ID	23
4.5.3	Channel Info.....	23
4.5.4	RX Packets.....	24
4.5.5	BATT 3.6V	24
4.6	System Config Menus	24
4.6.1	Configure Relays.....	24
4.6.2	Piezo Function	26
4.6.3	Time / Date Setup.....	26
4.6.4	Relay Refresh	26

4.6.5	Piezo Refresh	26
4.6.6	Local Piezo	27
4.7	Communications.....	27
4.7.1	TXP-WCR Radio Menus.....	27
4.7.2	RX History	28
4.8	Security	29
4.9	Data / Event Log	29
4.9.1	Event Log	29
4.9.2	Data Log (Optional).....	31
4.10	Technicians ONLY	32
5.1	Modbus Communications Menu	34
5.1.1	Modbus Register Summary	34
5.2	Wireless Modbus Option	35
5.3	WiFi Communications Option	36
5.3.1	TXP-WCR Controller Wifi Menus	36
5.3.2	Webpage Menus.....	37
5.4	Data Logging and USB Option.....	42
5.4.1	TXP-WCR Controller Data Logging Menus.....	43
5.4.2	Webpage Data Logging Menus.....	43
6.1	Motherboard Interface PCB	45
6.2	Relay PCB	47
6.3	Optional 24VDC 5-WATT Power Supplies.....	47
7.1	NEMA 4x Polyester Wall Mount	49
7.2	NEMA 4 Painted Carbon Steel Wall Mount	50
7.3	NEMA 4x Stainless Steel Wall Mount	51
7.4	NEMA 7 Explosion-Proof Wall Mount	52
8.1	Antenna Selection	53
8.1.1	Dipole and Collinear Antennas	53
8.1.2	Yagi Antennas	53
8.1.3	Mounting Near Other Antennas.....	55
8.1.4	Coax Cables.....	55
8.2	Surge Protection & Grounding	55
8.2.1	Antenna Grounding	56
8.2.2	Connections to Other Equipment.....	56
11	Appendix A – Table of Figures	59
12	Macurco Gas Detection Product limited warranty.....	61
	Technical Support Contact Information.....	61
	General Contact Information	61

1 Safety Information

1.1 Read Before Installation and Operation

IMPORTANT



AVERTISSEMENT: Lire attentivement les instructions avant de metre en marche.



CAUTION: FOR SAFETY REASONS THIS EQUIPMENT MUST BE OPERATED AND SERVICED BY QUALIFIED PERSONNEL ONLY. READ AND UNDERSTAND INSTRUCTION MANUAL COMPLETELY BEFORE OPERATING OR SERVICING.

ATTENTION: POUR DES RAISONS DE SÉCURITÉ, CET ÉQUIPEMENT DOIT ÊTRE UTILISÉ, ENTRETENU ET RÉPARÉ UNIQUEMENT PAR UN PERSONNEL QUALIFIÉ. ÉTUDIER LE MANUE D'INSTRUCTIONS EN ENTIER AVANT D'UTILISER, D'ENTREtenir OU DE RÉPARER L'ÉQUIPEMENT.



CAUTION: KEEP EXPLOSION PROOF COVER TIGHT WHILE CIRCUITS ARE ALIVE.

ATTENTION: GARDEZ LE COUVERCLE ANTI-EXPLOSION SERRÉ PENDANT QUE LES CIRCUITS SONT VIVANTS.

CAUTION: USE SUPPLY WIRES SUITABLE FOR 40°C ABOVE SURROUNDING AMBIENT.



ATTENTION: UTILISER DES FILS D'ALIMENTATION QUI CONVIENNENT A UNE TEMPERATURE DE 40°C AU-DESSUS DE LA TEMPERATURE AMBIANTE.

WARNING - EXPLOSION HAZARD

SUBSTITUTION OF COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2.

AVERTISSEMENT - RISQUE D'EXPLOSION

LA SUBSTITUTION DES COMPOSANTS PEUT PROVOQUER UNE ADAPTATION À LA CLASSE I, DIVISION 2.

WARNING- EXPLOSION HAZARD

DO NOT CONNECT OR DISCONNECT WHEN ENERGIZED UNLESS THE AREA IS KNOWN TO BE NON-HAZARDOUS.

AVERTISSEMENT - RISQUE D'EXPLOSION

NE PAS BRANCHER OU DÉBRANCHER LORSQU'IL EST SOUS TENSION, SAUF SI LA ZONE EST CONNUE POUR ÊTRE NON HASARDEUX.



CAUTION: A CONDUIT SEAL MUST BE INSTALLED WITHIN 18 INCHES OF THE ENCLOSURE.

ATTENTION: LE CONDUIT DOIT ÊTRE INSTALLÉ À MOINS DE 18 POUCES DU BOÎTIER.

1.2 WARNINGS

IMPORTANT

The TXP-WCR Wireless Monitoring System described in this manual consists of anywhere from 1 to 32 TXP-WTA Transmitters sending data wirelessly to any number of TXP-WCR Controllers and/or TXP-WAR (Wireless Alarm Relays). Users should have a detailed understanding of the wireless systems' operating and maintenance procedures. Use the TracXP system only as specified in this manual, or detection of gases and the resulting protection provided may be impaired. Read the following WARNINGS prior to use.

- Calibrate WTAs that communicate to the TXP-WCR wireless monitoring system with a known value of calibration gas after installation and a brief warm-up period (30 minutes recommended). Check calibration on a regular schedule (at least every 90 days). More frequent inspections are encouraged to spot problems such as dirt, oil, paint, grease or other foreign materials on the Sensor Housing filter.
- Do not paint any part of the WTA or corresponding components.
- Do not use the WTA if any enclosure is damaged or cracked or has missing components.
- Make sure covers, internal PCBs, and antenna connections are securely in place before operation.
- Use only a sensor element compatible and approve for use with the WTA.
- Periodically test for correct operation of the system's alarm events by exposing the WTA to a known value above the High Alarm set-point.
- Do not expose TracXP devices to electrical shock or continuous severe mechanical shock.
- Protect TracXP devices from dripping liquids and high-power sprays.
- Use only for applications described within this manual or approved by TracXP.



2 General Description

2.1 Introduction

The TracXP TXP-WCR (Wireless Controller Receiver) is available with 2.4GHz or 900MHz frequency to meet your communication requirements. Each TXP-WTA may be equipped with single or dual gas sensors and transmit two of the 32 maximum channel values to the controller and/or wireless alarm relay. There must always be only one TXP-WCR configured as a network's Server. Since it is often desirable to indicate readings and alarms in more than one location, multiple other controllers configured as Clients are easily added to the same wireless network, but only one may be configured as the Server. Each network's Server transmits Hopping Pattern and System ID settings only to Clients assigned to its network.

NOTE: "Channel" refers to each detector (sensor) input. For example, if a system has 8 dual transmitters with one H₂S & LEL detector on each that is 16 channels. If each of the 8 transmitters has only one detector that is 8 channels

2.2 Key Features

- 900 MHz or 2.4 GHz Radios
- Suited for 12VDC Solar Power Supplies
- Wi-Fi – Remote HMI Functionality
- Non-Volatile Memory – Retains Config. Values in Event of Power Outage
- Up to 26 FHSS Hopping Patterns
- 8 Programmable Relays
- 128X64 Pixel Graphic LCD / Magnetic Keypad
- Real-Time Clock & Calendar
- Multiple Antenna Options
- Non-Intrusive Magnetic Interface
- Event Logging
- Multiple Enclosure Wall Mount Options
- Openable Enclosure Door

2.3 Specifications

2.3.1 Power Input

- AC Power 100-240VAC 50/60Hz at .80-amp Max, 40 watts Max Steady-State
- 10-30VDC, 3 watts max (basic WCR with all relays energized)

NOTE: The optional features described below increase power consumption:

- AC primary power source connected to TB1 on the motherboard, TB3 terminals 1 and 2 on the motherboard provide a maximum of 24VDC 10 watts output power for powering auxiliary external devices such as relays, lights and monitors (see Figure 6-1).
- Power consumed from TB3 must be included when calculating system power consumption.

IMPORTANT: TB3 ONLY PROVIDES 24VDC POWER WHEN AC IS PRIMARY POWER.

Some applications may require 24VDC power in excess of the 10 watts available from the controller motherboard power supply. An optional 50-watt rail mounted AC/DC supply, PN: 26-2900-0127-5, is available to increase 24VDC power (see Section 6.3).

2.3.2 Standard Output

- 900MHz Power Adjustable From 10 mW to 1 watt
- 2.4GHz Output Set at 125 mW

2.3.3 Accuracy

-

2.3.4 Display

-

2.3.5 Ambient temperature

- -35 to 140 degrees F
- -25 to 60 degrees C

2.3.6 Temperature Drift

-

2.3.7 Humidity Range

- 0 TO 90% RH Non-Condensing.

2.3.8 Altitude

- Recommended up to 6,561 feet above sea level (2000 meters)

2.3.9 Housing / Installation Categories

- TXP-WCR/PY *NEMA 4X non-metallic polyester wall mount. DIV 2 Groups A, B, C, D; Category II and pollution degree 3; NEMA 4X; IP66
- TXP-WCR/PCS *NEMA 4 painted carbon steel wall mount. DIV 2 Groups A, B, C, D; Category II and pollution degree 3; NEMA 4; IP66
- TXP-WCR/SS *NEMA 4X stainless steel wall mount. DIV 2 Groups A, B, C, D; Category II and pollution degree 3; NEMA 4X; IP66
- TXP-WCR/XP *NEMA 7 wall mount for DIV 1 & 2 Groups B, C, D; includes 'O' Ring in door to satisfy NEMA 4 rating.

2.3.10 Relays

- The 8 standard Form C dry contact relays are functionally equivalent
 - 2 are on the Motherboard (see Figure 5-2)
 - 6 are on the Relay PCB (see Figure 5-3).
- Relays may be mapped to various alarm events as described in Section 4.6.1.
- All mechanical (dry contact) relays are rated at 5 Amp for 28 VDC and 250 ~VAC RESISTIVE loads.

IMPORTANT: APPROPRIATE DIODE (DC LOADS) OR MOV (AC LOADS) SNUBBER DEVICES SHOULD BE INSTALLED WITH INDUCTIVE LOADS TO PREVENT RFI NOISE SPIKES.

(A SNUBBER DEVICE IS USED TO SUPPRESS VOLTAGE TRANSIENTS)

2.4 Description of TXP-WCR Client / Server Wireless Networks

All TracXP by Macurco wireless devices utilize a FHSS (Frequency Hopping Spread Spectrum) Client/Server network where multiple Clients synchronize their frequency hopping to a single Server.

- Each network's Server transmits a beacon at the beginning of every frequency hop.
- Clients with the same Hop Channel and System ID Menu settings listen for the Server's beacon and upon receiving it, synchronize their hopping with the Server.
- Controllers may be user configured as either Clients or Servers since many installations require more than one controller, but only one Server is allowed per network.
- Battery powered TXP-WTAs are always Clients because their radio is usually powered down and therefore unable to continuously broadcast beacons as required by the Server.
- When there are multiple controllers on the same network, the most centrally located is usually designated as the Server.
- Multiple wireless relays may be added to a wireless system to provide additional alarms, and/or function as repeaters for the alarm states of the sensor assemblies in the wireless network.

Each device on a TracXP Wireless network must have its NETWORK ID Menus configured to share the same Hop Channel and Systems ID.

To simplify this setup:

1. Wireless Transmitters, Controllers, and Relays are limited to 26 unique Hop Channel and System ID settings entered as "A" through "Z" in the NETWORK ID Menu.
2. All devices on the same network must have the same Network ID letter designated to communicate with each other (see the WTA manual)—this means it is possible to locate multiple networks within the same coverage area without interference.

IMPORTANT! THERE SHOULD NEVER BE TWO SERVERS WITH THE SAME NETWORK SETTINGS WITHIN THE SAME COVERAGE AREA BECAUSE INTERFERENCE BETWEEN THE TWO SERVERS WILL SEVERELY HINDER RF COMMUNICATION!

Correct planning and design of wireless systems are imperative for ensuring a successful installation.

3 Product Description

3.1 System Diagrams

Refer to the following diagrams for identification of system components that may be referred to



Figure 3-1 – NEMA 4 Enclosure / Steel Enclosure

3.1.1 External System Diagram

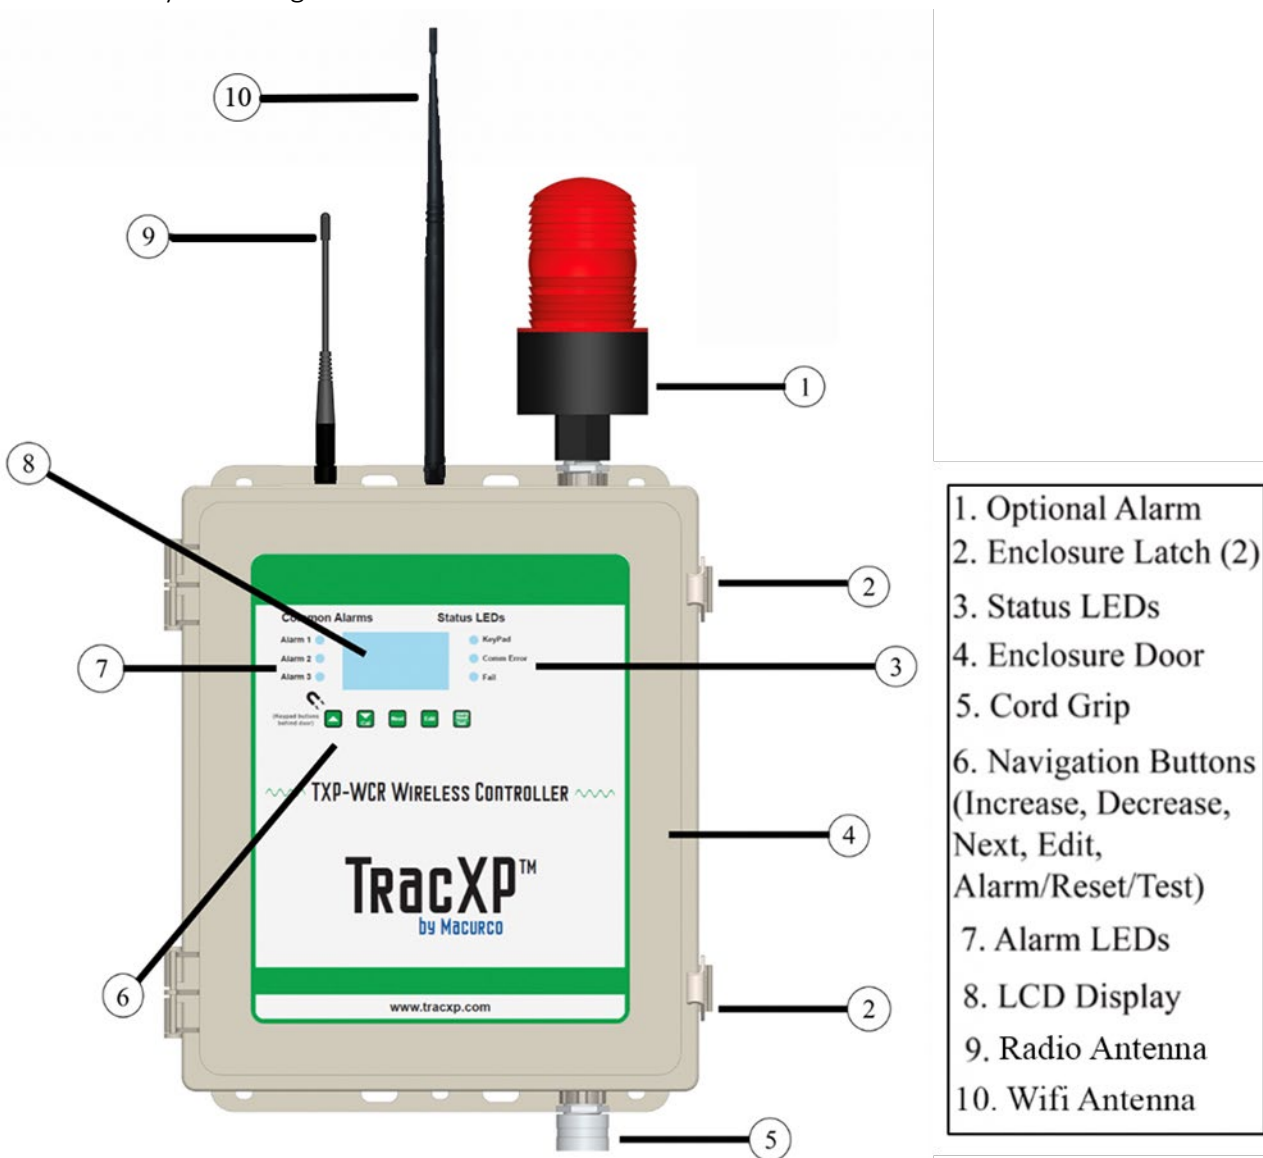


Figure 3-2 – External System Diagram

3.1.2 Internal system Diagrams


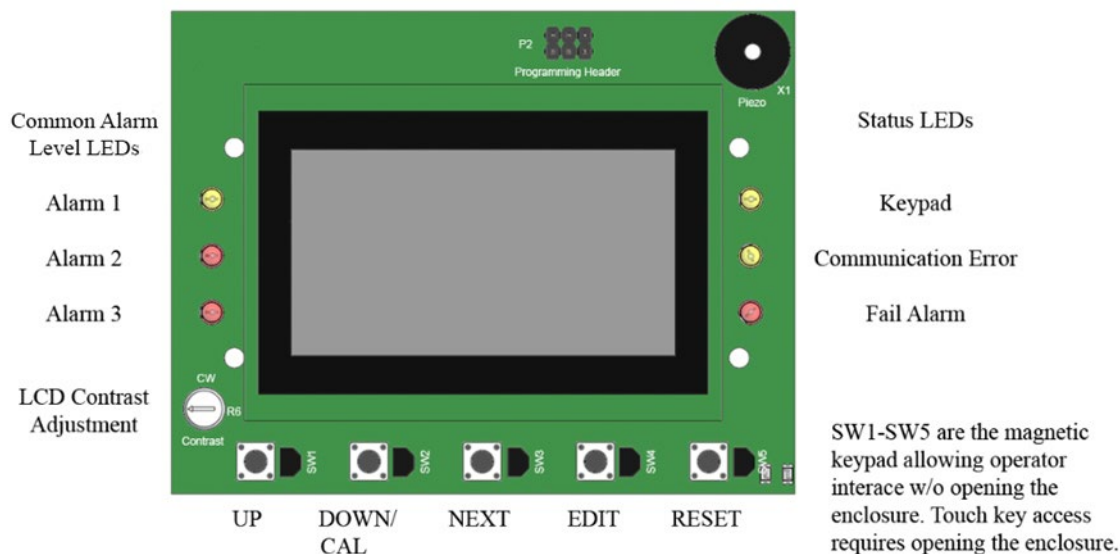


Figure 3-3 – LCD Board

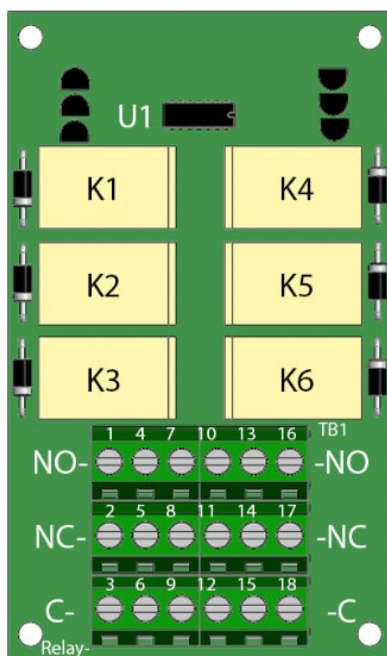

Note:
This board blocks access to the fuse and must be removed to replace a blown fuse.

Warning:
For continued protection against fire, replace only with same type and rating of fuse.

K1, K2, K3, K4, K5, & K6 are programmable as described in [Section 4.6.1](#)

TB1 terminals 1, 4, 7, 10, 13, & 16 are Normally Open Contacts for K1-K6

TB1 terminals 2, 5, 8, 11, 14, & 17 are Normally closed Contact for K1-K6

TB1 terminals 3, 6, 9, 12, 15, & 18 are Common (pole) Contacts for K1-K6

Contacts are rated for 5-amp resistive loads. Arc suppression snubber devices should be used for switching inductive loads.

Figure 3-4 – Relay Board

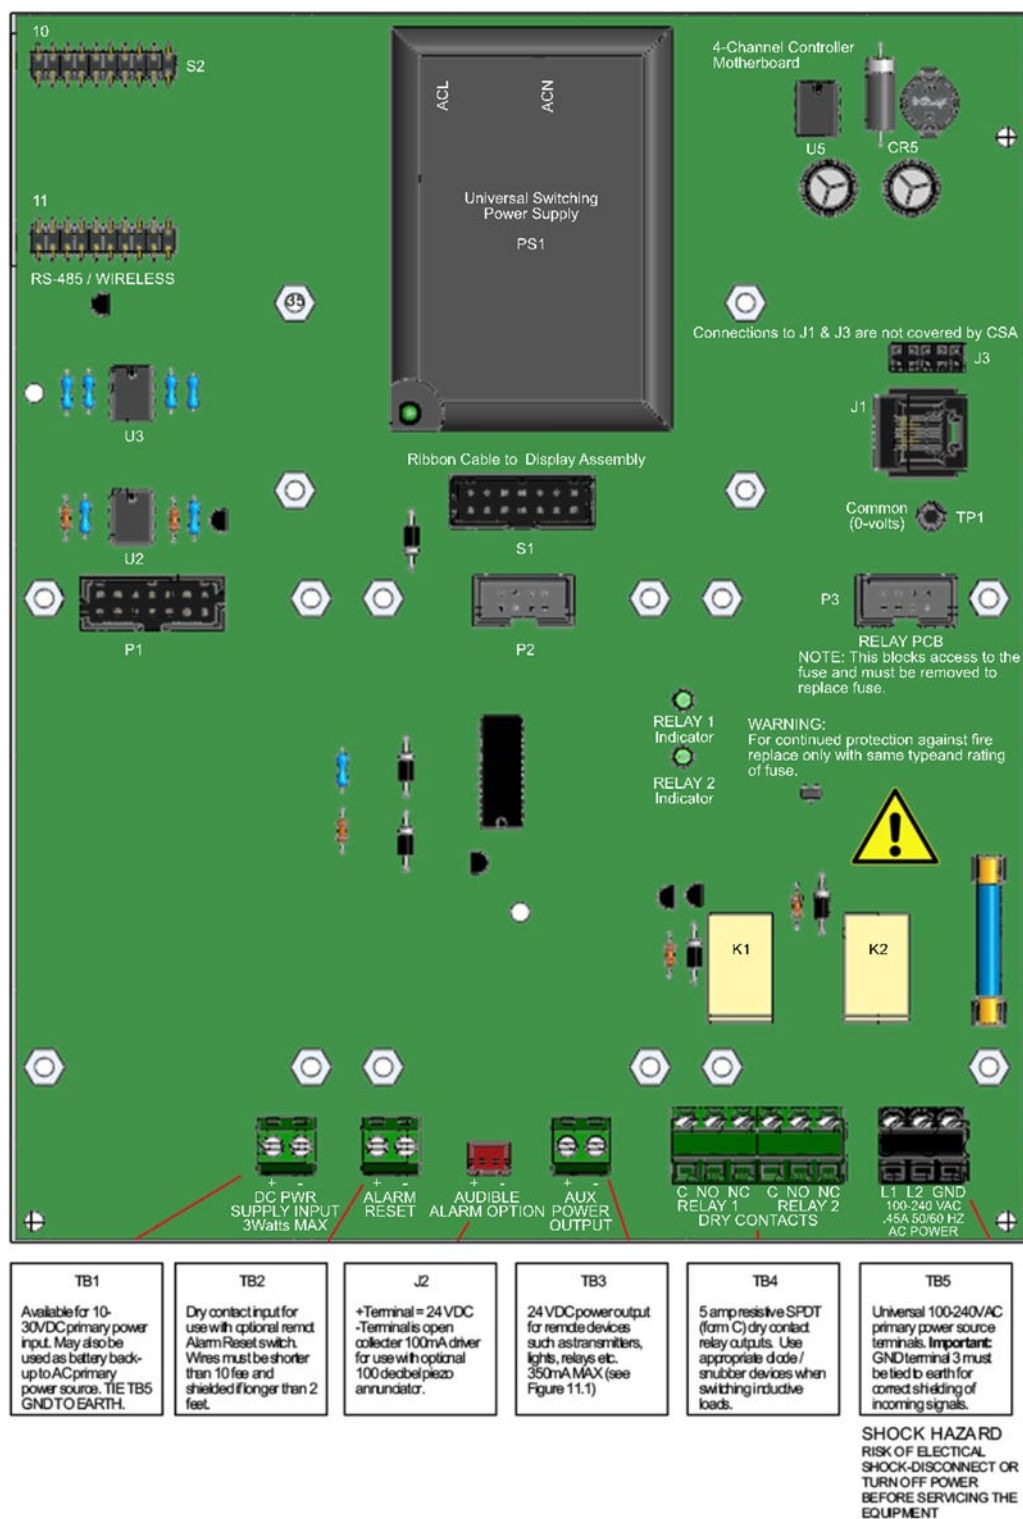


Figure 3-5 – Motherboard

3.1.3 Assembly Diagram

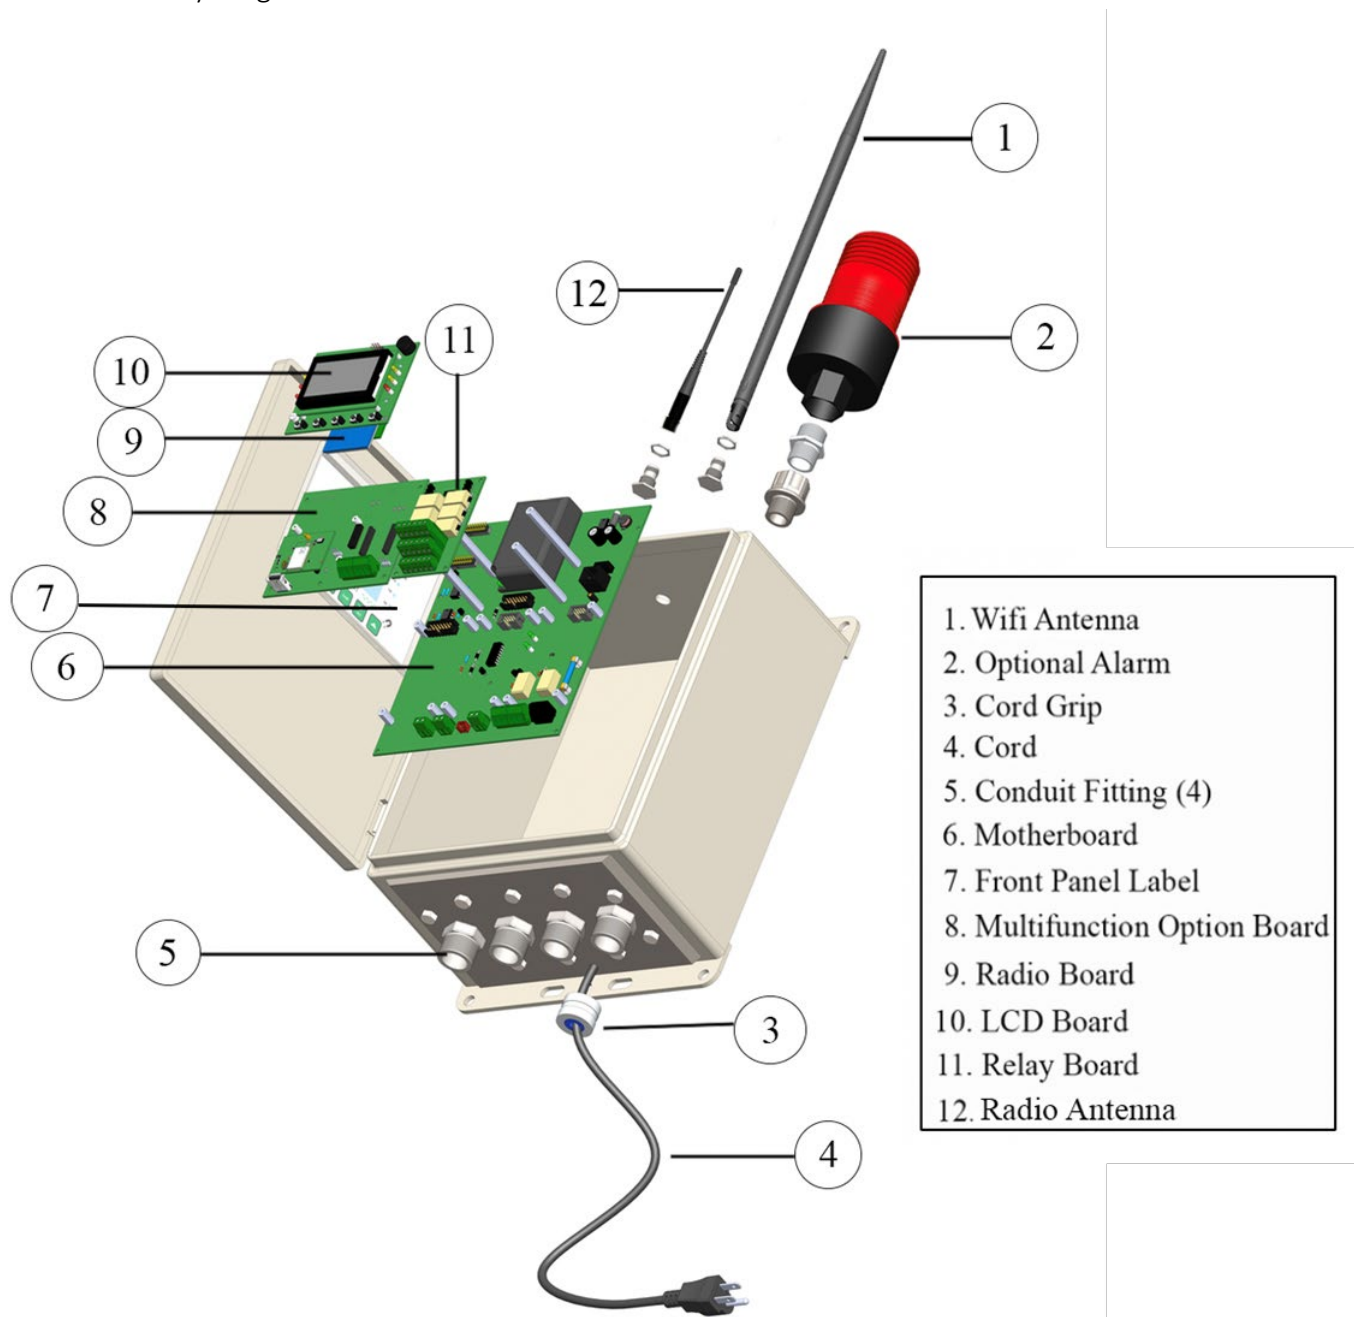


Figure 3-5 – Assembly Diagram

3.2 TXP-WCR Controller Description

The TracXP TXP-WCR Controller is designed to display readings and control alarm-event relay switching for up to 32 TXP-WTA Transmitters.

From each WTA, the Controller receives the signals of:

- Fail
- Alarm 1
- Alarm 2
- Alarm 3
- Low Battery

The Controller maps the received signals to its eight programmable relays, while adding features such as:

- Latching / Failsafe
- Alarm Acknowledge
- Refresh.

A backlit 128 x 64-pixel graphic LCD shows monitored data as bar graphs and engineering units.

A piezo driver circuit for a local audible annunciator may also be mapped to the relays. Eight standard 5-amp alarm relays may be programmed to activate based upon various alarm combinations and channel zoning.

A Multi-Function module (see Chapter 5) may be integrated into any of the standard controller enclosures to add:

- Data logging
- A wired or wireless Modbus slave port
- A Wi-Fi port with Webserver

The Wi-Fi feature allows remote HMI (Human Machine Interface) functionality via any web enabled device and allows responders to view real time and historical data on smart phones, tablets, and PCs prior to entering a potentially hazardous area.

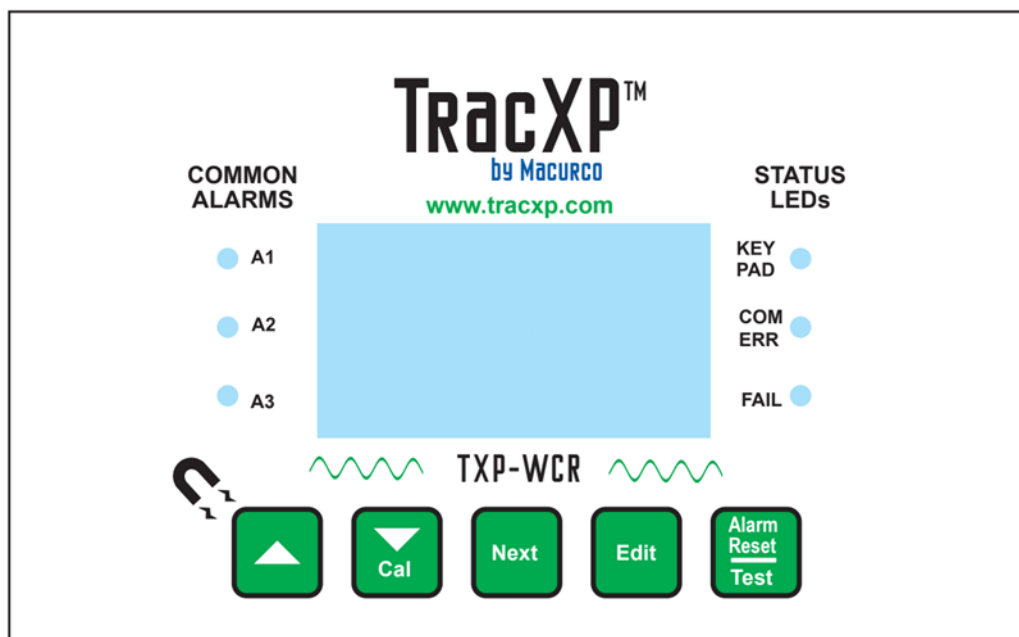


Figure 3-7 – Front Panel

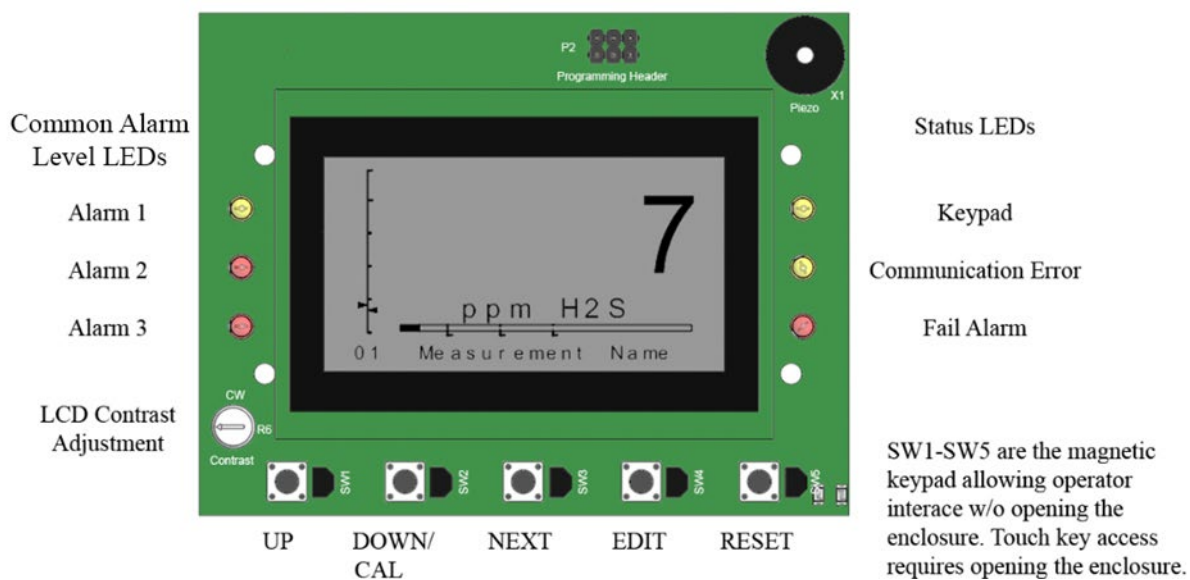


Figure 3-8 – Display PCB

3.3 Data Display Screens

When there are no channels with alarm conditions the controller displays ALARM STATUS CLEAR. When there are channels with alarms, the ALARM STATUS CLEAR screen is replaced by the Channel Alarm Status screen, which displays any active channel in alarm.

Press the NEXT key to:

- Display the Event Log screen, which displays various status changing events as discussed in Section 4.9.

Press the NEXT key again to:

- Display the Eunits/Bar Graph screen, shown in Figure 3-10, to observe incoming WTA broadcasts one channel at a time, which allows scrolling past all active channels with the UP/DOWN keys.

NOTE: “Eunit” (Engineering unit) is a unit of measurement like ‘PPM’ or ‘% LEL’.

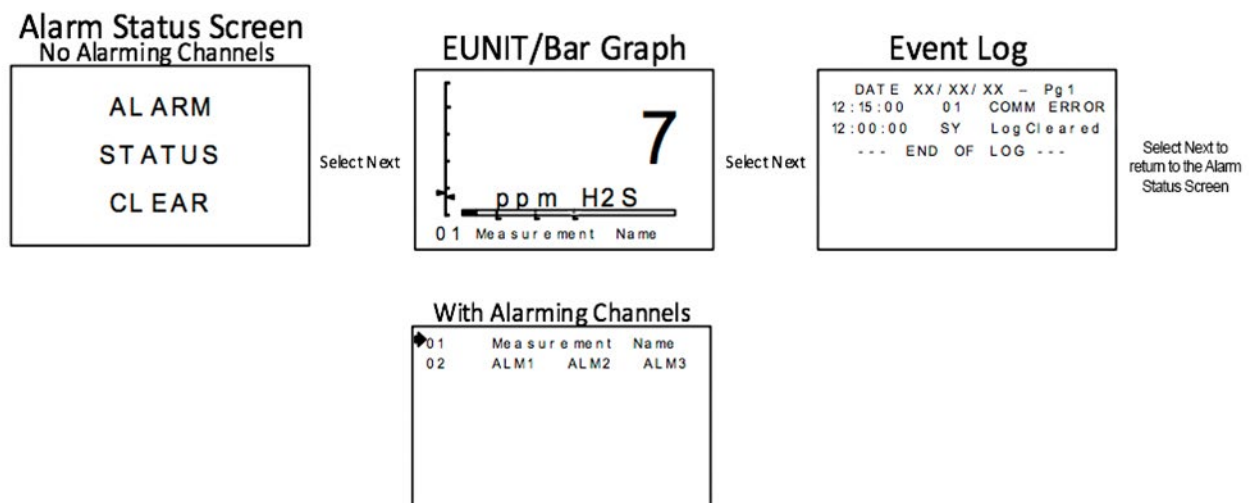


Figure 3-9 – Data Displays

3.3.1 EUNIT/BAR Graph Screen and Comm Error Timeline

The controller EUNIT/Bar Graph screen in Figure 3-10 consists of:

- Large digital value with Engineering Units
- Horizontal bar graph with A1, A2 and A3 levels indicated across the bar
- 16-character Measurement Name field for user ID of this WTA’s location
- The crucial Vertical Comm Error Timeline on the left edge of the screen

The UP/DOWN keys scroll this screen through all active channels one at a time.

The vertical Comm Error Timeline on the far left of this screen is divided into five segments, from bottom to top.

- Each segment equals one WTA Wakeup Timer interval from the WTA providing data to this controller channel (see the WTA manual).

The arrow on the right side of the Timeline slides up the line as time goes by for the current channel being observed.

- Every time the WTA broadcast packet is received on this channel, the pointer resets to the bottom of the timeline.
- If the pointer reaches the top of the timeline the TXP-WCR Controller will raise a Comm Error for this channel.

NOTE: If the wireless link between the WTA and this channel is functioning properly the pointer should never exceed the 1st Wakeup Timer line segment.

The arrow on the left side of the Timeline slides up the line as time goes by in a similar manner to the other arrow.

- This pointer represents the channel which is furthest along it's timeline for all of the monitored channels.
- Useful in determining if any channels have missed a transmission without having to cycle through observing all of the channels.

NOTE: If the arrow on the left-hand side has not passed the first segment, all of the monitored channels have received their latest transmission.

EUNIT/Bar Graph Screen

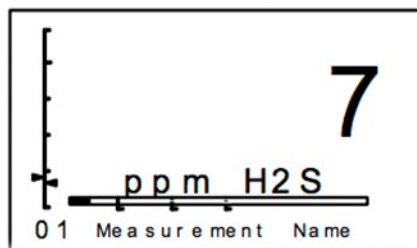


Figure 3-10 – EUNIT / Bar Graph Screen

The EUNIT/Bar Graph screen has flashing alarm icons for A1, A2, and A3. The Menu Item in the System Menu Controls if the readings display or block negative values. The number in the bottom left indicates the channel currently being displayed. Use UP/DOWN to cycle through channels to be displayed. The Vertical Comm Error Timeline on the far left of the screen is divided into five segments from bottom to top. Each segment equals one WTA Wakeup Timer from the WTA providing data to this WCR channel. The entire timeline is equal to 5 times the Wakeup Timer value.

3.3.2 Alarms Status Clear Screen

The ALARM STATUS CLEAR screen indicates:

- There are no alarm conditions among the active channels.
- The Wireless Monitoring System is performing normally.

The NEXT key moves from this screen to the Event Log screen

3.3.3 Channel Alarm Status Screen

The Channel Alarm Status screen shows all active channel numbers but causes any with an alarm condition to flash.

1. Use the UP/DOWN keys to point to a channel in alarm.
2. EDIT brings up that channel's EUNIT/Bar Graph screen to provide more detailed information about the alarm.

3. The pointer will automatically go to the first alarming channel when entering this screen.

NOTE: If no Channel is in an alarm state this screen will not be displayed, and the Alarms Status Clear screen will be displayed in its place.

3.3.4 Event Log Screen

The Event Log screen shows time and date stamped alarm events in a first in first out 99 event buffers. The Clear Event Log menu allows erasing of all events. The Event Log displays several different types of events:

1. Comm Error in and clear
2. Alarms in and clear
3. Relays energized and de-energized
4. Low battery
5. Calibration Mode
6. Warm up
7. Power up
8. Local acknowledge
9. Cold Boot
10. RMT Ready
11. Network Configuration
12. Disabled
13. RMT Initialization
14. System locked and unlocked
15. Log Cleared
16. Push to Test
17. Remote acknowledge
18. Remote Configuration
19. Missing sensor
20. Relay Configuration

When one of the previous events occurs, a new line will be displayed on the Event Log showing the time of the occurrence, the channel it occurred on (or SY if it is a system occurrence) and the type of event. For more detailed information refer to Section 4.9.

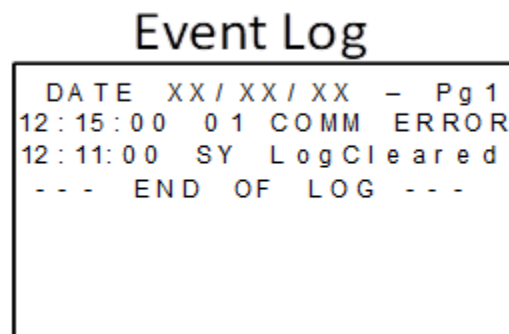


Figure 3-11 – Event Log Screen

4 Operating Instructions

4.1 Operator Interface

The TXP-WCR Controller's graphic LCD and 5-button keypad serve as its operator interface. The keypad is accessed non-intrusively through the WCR door using the handheld magnetic wand or, if in an unclassified area, by opening the door and using the pushbutton keys below the display.

The Keys are identified as UP, DOWN, NEXT, EDIT and RESET.

To use the non-intrusive interface with the magnetic wand a "swiping" motion of the magnet is used instead of pressing a key. In this manual, a "swipe" means hold the magnet directly over the key's target, close to or against the WCR's door, and in the same motion move the magnet away from the target. Each "swipe" equals one press of the key, and swipes may be done rapidly to move through fields with many options. It is ok to touch the door with the magnet but be careful not to "swipe" too close to one of the other keys and activate it by mistake.

To access all controller configuration parameters entered with this operator interface:

1. Access the SETUP menus by pressing EDIT from the "Alarm Status" screen.
2. To exit the Setup mode, press NEXT, or wait 5 minutes without pressing additional keys.

During the Setup mode:

- Alarm relays and front panel alarm LED indicators remain active.
- A SECURITY menu offers a password feature to prevent tampering with controller menus.

NOTE: Controllers only display the readings and alarm events which are created at the TXP-WTA. Channel Alarm decision making occurs inside the TXP-WTA.

4.2 Setup Menu Configuration

Channel menus:

- Affect only the specific channel selected (see Section 4.5).

System menus:

- Related to features not specific to any channel (see Section 4.6).

To select the desired menu:

1. Scroll with UP/DOWN
2. Press EDIT to enter each menu

NOTE: Set date and time before updating other settings.

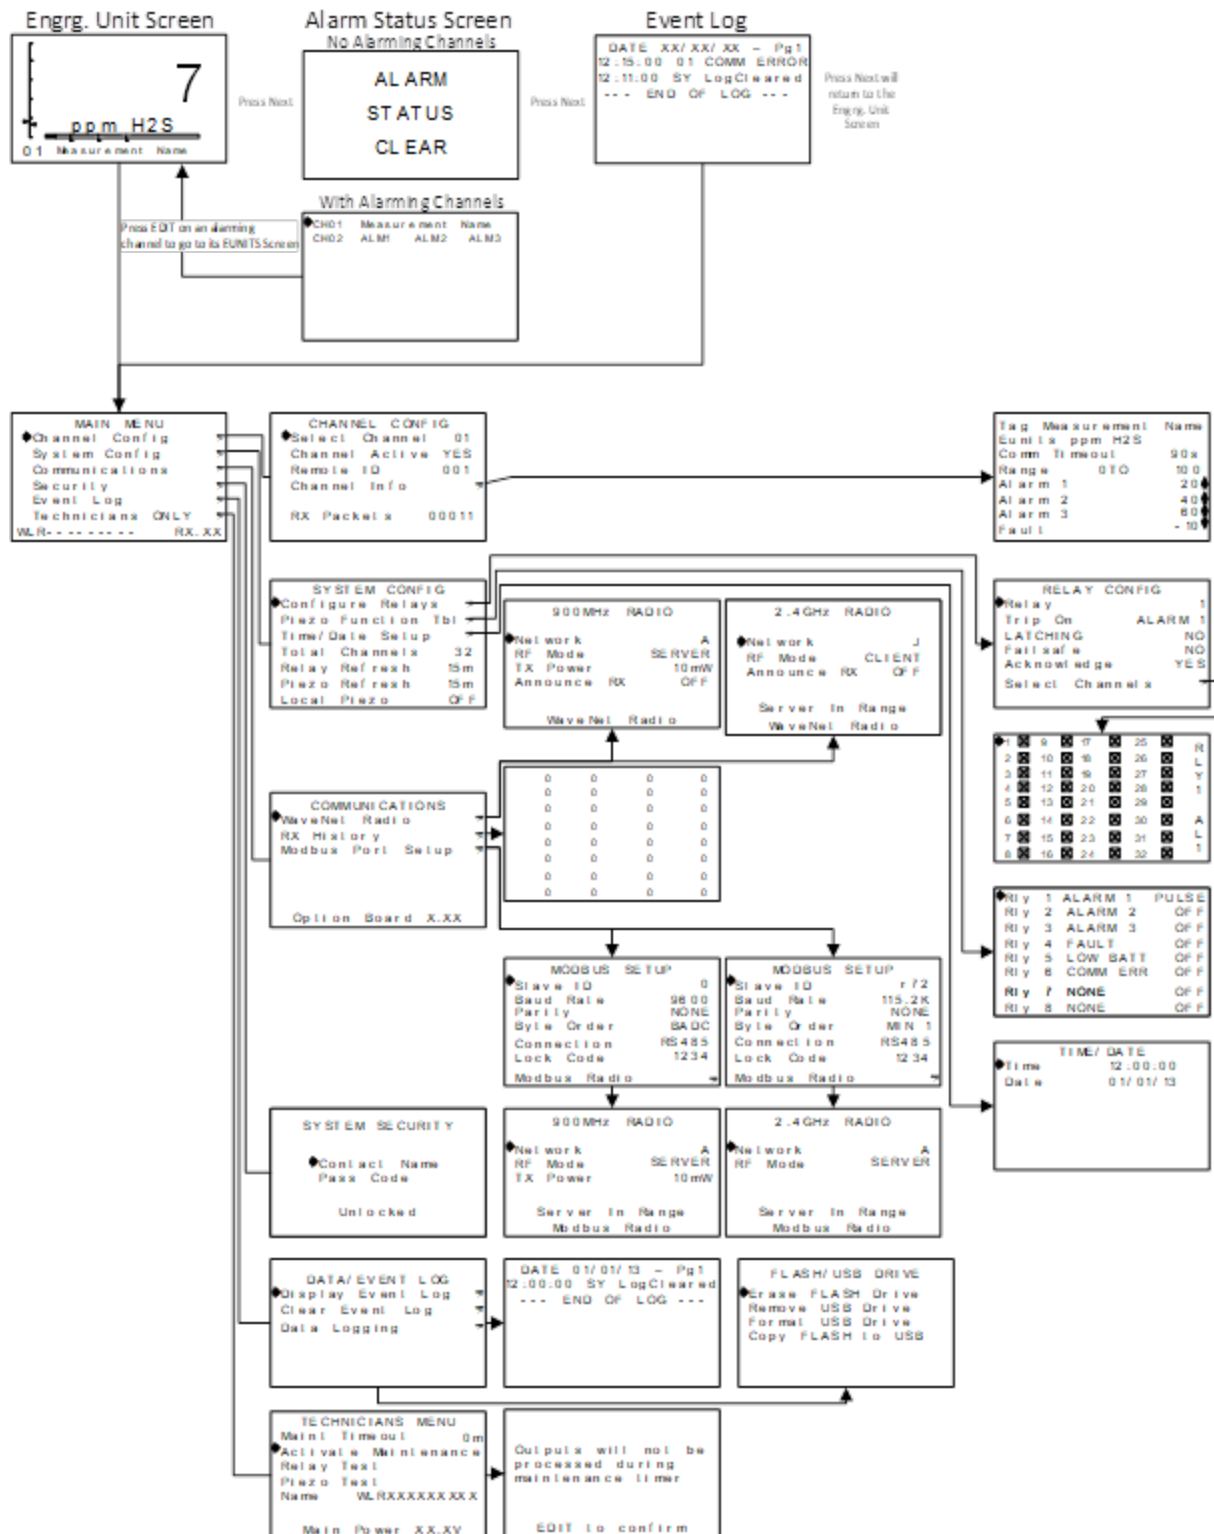


Figure 4-1 – Menu Tree

4.3 Changing Menu Variables Using the Keypad

After entering the menu:

1. Use the UP/DOWN keys and control a pointer to indicate a selected variable.
2. Press the EDIT key to access simple YES/NO or ON/OFF entries.
 - Others have many ASCII character possibilities including: ABCDEFGHIJKLMNOPQRSTUVWXYZ [\] ^ _ ` a b c d e f g h i j k l m n o p q r s t u v w x y z blank space ! " # \$ % & ' () * + , - . / 0 1 2 3 4 5 6 7 8 9 ; : < = > ? @ . (Notice the often-used blank character is located after lower case z and before the exclamation point (!))
3. Press EDIT to place a cursor under the item.
4. Use the UP/DOWN keys to scroll through each allowed entry.
5. Press the NEXT key to move the cursor to the next position within a field.
6. Press EDIT when the field is complete to clear the cursor and load the field into non-volatile memory where it is retained indefinitely.
 - Without a cursor present, the NEXT key closes open menus in reverse order and returns the LCD to the data display.

4.4 Main Menu

The MAIN MENU is the entry level screen to the following menus:

1. Channel Config.
2. System Config.
3. Communications
4. Security
5. Event Log
6. Technicians ONLY

To reach the MAIN MENU group shown in Figure 4-2:

Press EDIT with any data display present.

To reach an additional menu listed above:

- Use the UP/DOWN keys to move the pointer to the desired menu.
- Press the EDIT key.

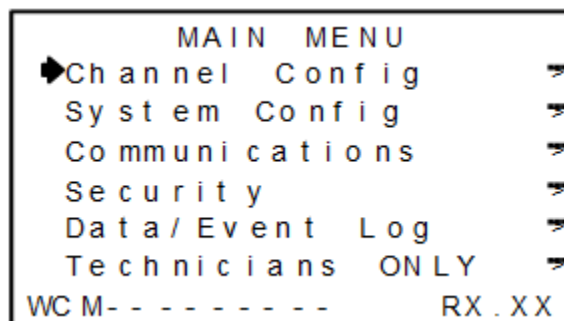


Figure 4-2 – Main Menu

4.5 Channel Config Menu Group

The CHANNEL CONFIG menu shown in Figure 4-3 allows configuration of variables specific to the selected channel.

To select a channel to be affected:

1. Press the EDIT key.

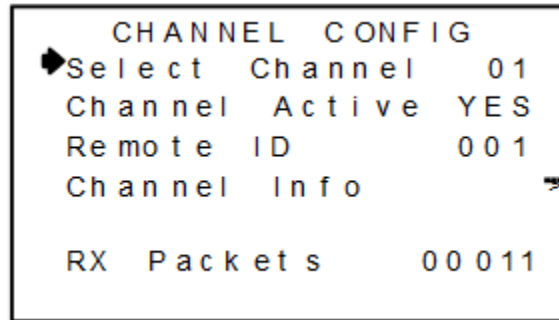


Figure 4-3 – Channel Config Menu

4.5.1 Channel Active

Channel Active is a YES/NO field that allows temporarily deactivating channels. Channels that may be deactivated are limited to the number of Total Channels designated in the System Config menu group (see Section 4.6.4).

To permanently remove a channel:

- Adjust the Total Channels down to reflect the number of TXP-WTAs communicating to this controller.

4.5.2 Remote ID

Selecting Remote ID allows the user to change which WTA is assigned to this controller channel.

- Remote ID numbers are limited to 1-32 but any of these may be assigned to any of the 32 controller channels.
- Remote ID numbers are useful for arranging which controller channels are used to display specific TXP-WTAs.
 - For example, dual gas TXP-WTAs have consecutive Remote IDs, it might be desirable to separate these at the controller in order to keep same gas types together on its readout.

4.5.3 Channel Info

CHANNEL INFO data is received and broadcasted to the TXP-WCR Controller at every WTA:

- power up
- channel edit
- routinely upon expiration of the TX Config Timer described in the TXP-WTA manual.

Modification of the parameters on this screen may only be done at the Wireless Transmitter broadcasting to this channel.

4.5.4 RX Packets

RX Packets displayed at the bottom of the CHANNEL CONFIG screen is a counter incremented each time a new data packet is received from the WTA.

Displaying the RX HISTORY screen in the COMMUNICATIONS menu group can reset it to zero by:

Note: Pressing Alarm Reset button (see Section 4.7.2).

4.5.5 BATT 3.6V

The battery voltage of the WTA broadcasting to this channel is also displayed at the bottom of the CHANNEL CONFIG screen. The nominal value is 3.6 volts, and TXP-WTAs trip their Low Batt alarm at < 3.3 volts.

4.6 System Config Menus

The SYSTEM CONFIG menu shown in Figure 4-4 allows configuration of variables for the controller unrelated to any specific channel.

This includes programming how the relays and audible piezos function, the total number of channels, and the time and date.

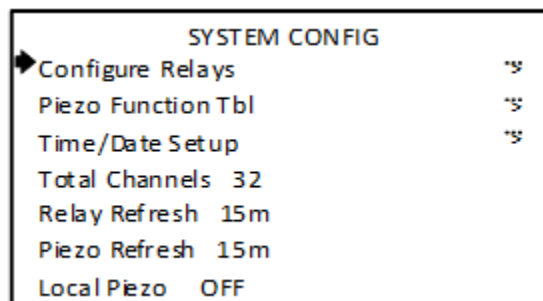


Figure 4-4 – System Config Menu

4.6.1 Configure Relays

The RELAY CONFIG screen shown in Figure 4-5 allows sophisticated programming of each of the eight relays.

To select the relay to be configured:

1. Point to the Relay menu
2. Press EDIT.
 - **Trip On** controls what conditions will cause the relay to activate. These may be
 - A1
 - A2
 - A3
 - Fault
 - Low Battery (from a WTA)
 - Comm Error
 - Remote Edit (someone is modifying the WTA's settings)
 - Channel Disable (a controller channel has been disabled by an operator)
 - None (this relay is not used and will never activate).
 - **Latching** determines either manual or automatic alarm reset operation.

- YES, requires a manual Alarm Reset button press to unlatch the relay even though an alarm condition no longer exists.
- NO allows this relay to automatically reset after the alarm condition clears.
- **Failsafe** is an ON/OFF field where ON causes the relay to energize when the condition is not present.
 - When the Trip On condition becomes true the relay de-energizes.
 - Failsafe is often utilized when it is desirable for loss of power to indicate the alarm condition.
- **Acknowledge** is an ON/OFF field with ON typically used when the relay controls an audible device and it is desirable to silence the horn audible while troubleshooting the alarm.
 - Applying an Alarm Reset causes the relay to return to its inactive state even though the alarm condition remains in effect.
 - The Relay Refresh menu (see Section 4.6.5) may be used to re-activate acknowledged relays.
- Select Channels brings up a check box (see Figure 4-6) screen for assigning which of the Active Channels are assigned to this relay.
 - This allows creating Zones among the active channels.

```

RELAY CONFIG
Relay 1
Trip On ALARM 1
LATCHING NO
Failsafe NO
Acknowledge YES
Select Channels
  
```

Figure 4-5 – Configure Relays Menu

1	<input checked="" type="checkbox"/>	9	<input checked="" type="checkbox"/>	17	<input checked="" type="checkbox"/>	25	<input checked="" type="checkbox"/>	RELAY 1
2	<input checked="" type="checkbox"/>	10	<input checked="" type="checkbox"/>	18	<input checked="" type="checkbox"/>	26	<input checked="" type="checkbox"/>	
3	<input checked="" type="checkbox"/>	11	<input checked="" type="checkbox"/>	19	<input checked="" type="checkbox"/>	27	<input checked="" type="checkbox"/>	
4	<input checked="" type="checkbox"/>	12	<input checked="" type="checkbox"/>	20	<input checked="" type="checkbox"/>	28	<input checked="" type="checkbox"/>	
5	<input checked="" type="checkbox"/>	13	<input checked="" type="checkbox"/>	21	<input checked="" type="checkbox"/>	29	<input checked="" type="checkbox"/>	
6	<input checked="" type="checkbox"/>	14	<input checked="" type="checkbox"/>	22	<input checked="" type="checkbox"/>	30	<input checked="" type="checkbox"/>	
7	<input checked="" type="checkbox"/>	15	<input checked="" type="checkbox"/>	23	<input checked="" type="checkbox"/>	31	<input checked="" type="checkbox"/>	
8	<input checked="" type="checkbox"/>	16	<input checked="" type="checkbox"/>	24	<input checked="" type="checkbox"/>	32	<input checked="" type="checkbox"/>	

Figure 4-6 – Select Channels Screen


4.6.2 Piezo Function

The Piezo FUNCTION group determines behavior of the optional 100dB locally mounted piezo, related to the eight relays.

Choices are:

- OFF,
- Chirp,
- Pulse, and
- Steady.

NOTE: All settings are set to OFF by default.

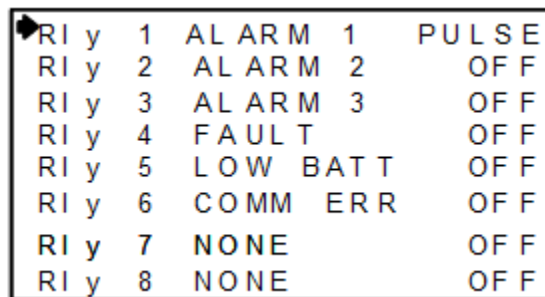

RI y	1	AL ARM	1	PULSE
RI y	2	AL ARM	2	OFF
RI y	3	AL ARM	3	OFF
RI y	4	FAULT		OFF
RI y	5	LOW BATT		OFF
RI y	6	COMM ERR		OFF
RI y	7	NONE		OFF
RI y	8	NONE		OFF

Figure 4-7 – Piezo Functions

4.6.3 Time / Date Setup

The Time and Date menus are for setting the correct time and date of the 24-hour clock and calendar. Time of day must be entered in 24-hour mode. For example, 6:00:00 PM is indicated as 18:00:00.

NOTE: Set date and time before updating other settings.

4.6.4 Relay Refresh

Key Qualities

- May be set from 0-120 minutes with 0 turning the Refresh function OFF.
- Each relay may be set to allow Acknowledge (see Section 4.6.1) which means an Alarm Reset deactivates the relay even though the alarm condition still exists.
- Refresh will re-activate the relay after this timer expires. This feature is useful for silencing audible devices, and then automatically activating them again if the alarm condition remains after a period of time.

4.6.5 Piezo Refresh

Key Qualities

- May only be set from 1 to 60 minutes and may not be turned OFF.
- Piezo Refresh only affects the optional 100dB locally mounted piezo, which connects to the Audible Alarm connector on the motherboard (see Figure 5-2). This piezo is always Acknowledgeable.

4.6.6 Local Piezo

Local Piezo is an ON/OFF field where ON causes the tiny piezo on the TXP-WCR Controller Display PCB to mimic the larger piezo wired to the motherboard. This can be useful for testing operation of the louder device even though it is disconnected.

NOTE: The Local Piezo always chirps as keys are depressed.

4.7 Communications

The Communications / TXP-WCR Radio menus shown below in Figure 4-9 allow setting Network ID, Server / Client and viewing a history of how many successful wireless messages have been received by each channel. Figure 4-10 shows the TXP-WCR Radio Menus for both operating frequencies.

NOTE: Lines 3 & 4 (“Modbus” and “WiFi”) will only be displayed with multi-function options.



Figure 4-9 – Communication Menus

4.7.1 TXP-WCR Radio Menus

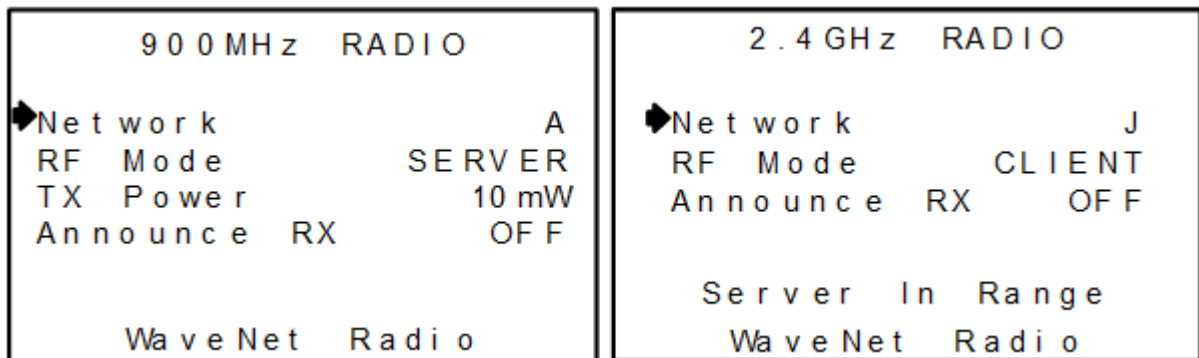


Figure 4-10 – Radio Menus

4.7.1.1 Network

TracXP wireless devices utilize the Network setting to assign up to 26 unique hopping patterns. To simplify system setup, Network is entered using letter designators A through Z:

- A = [Hop Channel 1, System ID 1]
- Z = [Hop Channel 26, System ID 26]

- M – Z = Encrypted Networks (When selected, data will be encrypted via proprietary methods to ensure that only devices on that network which hold the encryption key will be able to decipher the data being transmitted)

A TXP-WTA will not indicate Server In-Range status or communicate with any TXP-WCR/TXP-WAR operating on a different Network. This feature allows multiple TXP-WCR wireless systems to be located within range of each other without interference.

2.4GHZ used in EU countries:

- Hop channels on 2.4 GHZ models may be set between 1 and 26.
- Hop channels A-R include EU “low band” frequencies 2406 – 2435MHZ.
- Hop channels S-Z include EU “high band” frequencies 2444 – 2483.5MHZ.

IMPORTANT: EXPLORE WHAT FREQUENCIES ARE APPROPRIATE FOR THE FINAL LOCATION OF ANY WIRELESS SYSTEM.

4.7.1.2 RF Mode

RF Mode determines if the controller is a Server or a Client.

Specifications

- ONLY ONE SERVER IS ALLOWED PER WIRELESS NETWORK ID.
- Numerous controllers may share the same Network ID but only one may be the Server.
- Networks with multiple controllers should have the most centrally located unit designated as the Server (see Section 2.2).

4.7.1.3 TX Power

The TX Power menu is only available on 900MHz systems and allows the setting of the TX Power for the radio. The settings for this are:

- 10mW
- 200mW
- 400mW
- 1W

2.4GHZ variation: The TX Power menu is not available in 2.4GHZ models and is fixed at 125mW conducted.

4.7.1.4 Announce RX

The Announce RX setting is set to off by default. When Announce RX is turned on, the local Piezo mounted on the Display PCB will BEEP every time a packet of information is received from a TXP-WTA.

4.7.2 RX History

RX History is provided as a wireless network diagnostics tool.

Key Qualities

- It counts how many broadcasts are received by each channel.
- It always displays 32 channels regardless of how many active channels the controller is configured for currently.

To reset all 32 totals to zero:

1. Enter the screen
2. Press the Alarm Reset key

0000	0000	0000	0000
0000	0000	0000	0000
0000	0000	0000	0000
0000	0000	0000	0000
0000	0000	0000	0000
0000	0000	0000	0000
0000	0000	0000	0000
0000	0000	0000	0000

Figure 4-11 – RX History

4.8 Security

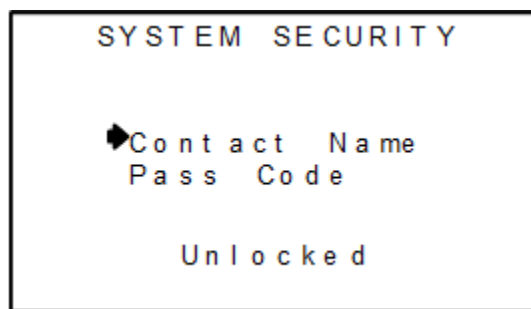


Figure 4-12 – Security Menu

The SECURITY menu in Figure 4-12 requires the 4-digit Pass Code prior to altering menus.

Specifications

- Entering a Pass Code and locking the menu locks the entire menu database until the correct Pass Code is entered.
- Contact Name is a 12-character ASCII field available for displaying a phone # or name of person who knows the Pass Code.
- Lost Pass Codes may be recovered by entering the locked security menu and pressing the UP, DOWN and NEXT keys at the same time and holding them for 5 seconds.
- The 4-digit code appears near the bottom of the screen.

4.9 Data / Event Log

4.9.1 Event Log

The Clear Event Log menu allows erasing of all events.

The Display Event Log shows Time & Date stamped alarm events in a first-in-first-out 99-event buffer and displays several different types of events:

	Event	Abbreviation
1	Communication Error in and clear	COMM ERROR, COMM OK
2	Alarms in and clear	Alarm1 IN, Alarm2 IN, Alarm 3 IN, Fault IN, Alarm1 OUT, Alarm2 OUT, Alarm3 OUT, Fault OUT
3	Relays energized and de-energized	Relay1 CLR, Relay2 CLR, Relay3 CLR, Relay4 CLR, Relay5 CLR, Relay6 CLR, Relay7 CLR, Relay8 CLR, Relay1 SET, Relay2 SET, Relay3 SET, Relay4 SET, Relay5 SET, Relay6 SET, Relay7 SET, Relay8 SET
4	Low battery	LOW BAT
5	Cal Mode	CAL MODE
6	Warm up	WARM UP
7	Power up	POWER UP
8	Local acknowledge	LOCAL ACK
9	Cold Boot	COLD BOOT
10	RMT Ready	RMT READY
11	Net Configuration	NET CONFIG
12	Disabled	DISABLED
13	RMT Initialization	RMT INIT
14	System locked and unlocked	SYS LOCKED, UNLOCKED
15	Log Cleared	LogCleared
16	Push to Test	PushToTest
17	Remote acknowledge	Remote ACK
18	Remote Configuration	RMT CONFIG
19	Missing sensor	MIS SENSOR
20	Relay Configuration	RLY CONFIG

```

DATE 01/01/13 - Pg 1
12:00:00 SY LogCleared
- - - END OF LOG - - -

```

Figure 4-13 – Display Event Log Pages

4.9.2 Data Log (Optional)

When the optional Multi-Function Board with Data Logging Capabilities is installed, this menu

(Figure 4-14) is available, and performs the following functions:

1. Erase FLASH drive – Erases the onboard FLASH of the Multifunction Board
2. Remove USB drive – Allows safe removal of any attached USB drive
3. Format USB drive – Reformats any attached USB drive
4. Copy FLASH to USB – Copies the information from the onboard FLASH memory to any installed USB drive

For a more detailed description of the Data Logging capabilities of the Multi-Function Option Board refer to Chapter 5.

```

FLASH/USB DRIVE
◆ Erase FLASH Drive
Remove USB Drive
Format USB Drive
Copy FLASH to USB

```

Figure 4-14 – Flash / USB Drive Menu

4.10 Technicians ONLY

WARNING: USERS OF THIS MENU MUST HAVE A DETAILED UNDERSTANDING OF ITS FUNCTION.

In order to prevent accidental modification of these items, user may access the TECHNICIAN menu in Figure 4-15 by:

1. Entering the special key sequence of four consecutive UP keystrokes.

Maint Timeout and Activate Maintenance are options designed specifically to work together.

To disable alarms and relays:

2. Select Activate Maintenance all alarms will not be processed, and relays are disabled.

To set a time which causes maintenance mode to be exited after a specified amount of time has passed:

3. Select Maint Timeout—this is very helpful in preventing inadvertently disabling alarms for extended periods of time.

Relay Test allows each of the 8 relays to be energized manually. This is helpful for ensuring relays are set up properly.

The Piezo Test cycles the Piezo on and off when selected until another key is selected.

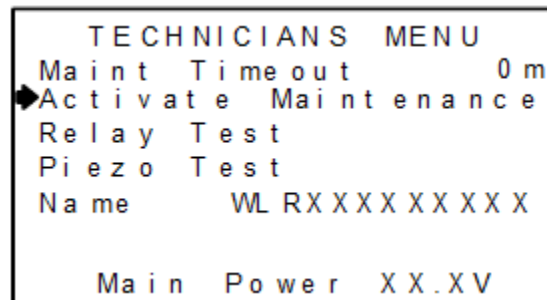


Figure 4-15 – Technicians Only Pages

5 TXP-WCR Controller Multi-Function Option

Note: USB Drive references will only be displayed if a flash drive is inserted in the controller.

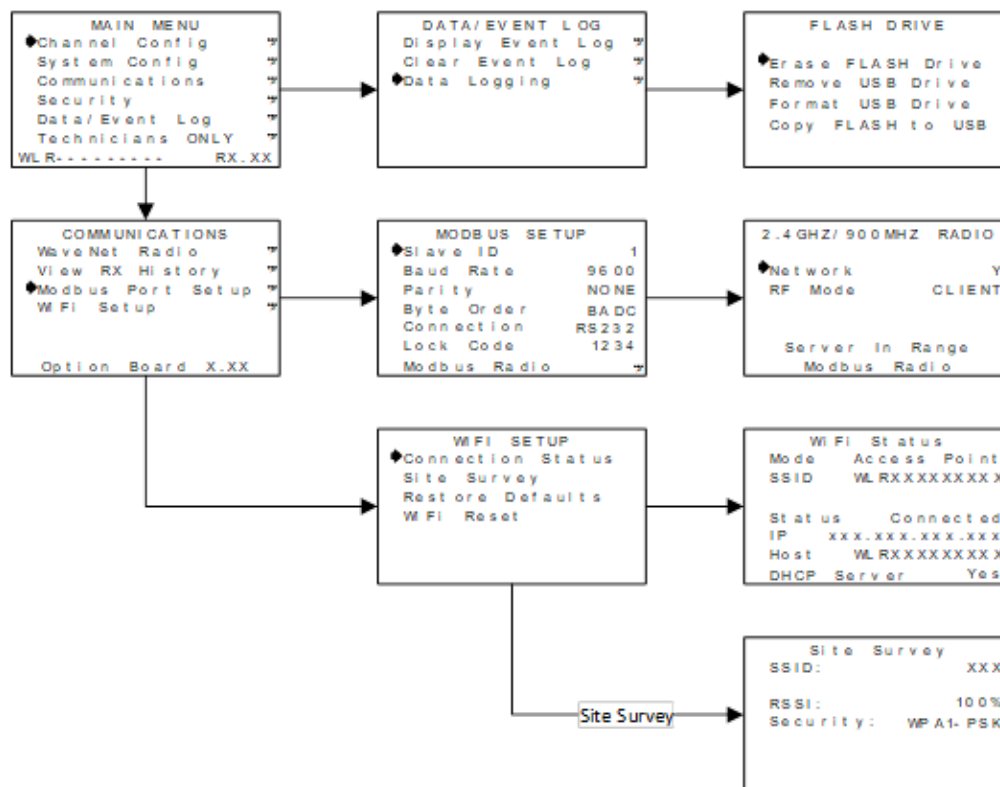


Figure 5-1 – Multi-Interface Option Board Menus

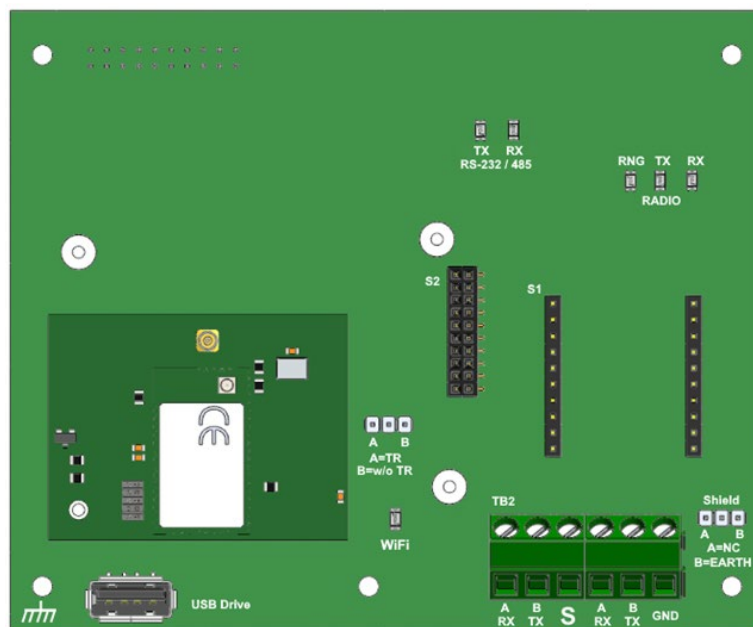


Figure 5-2 – Multifunction Option Board

5.1 Modbus Communications Menu

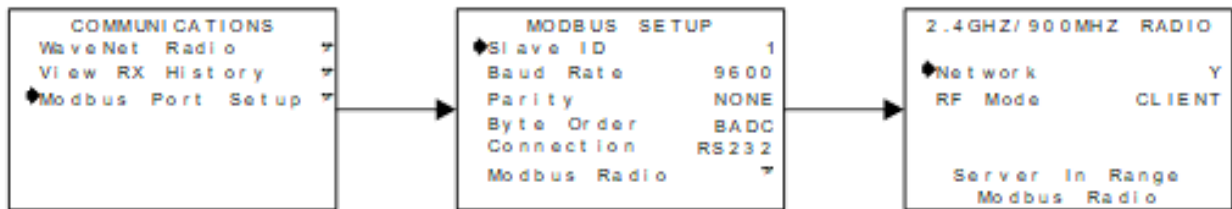


Figure 5-3 – Modbus Communication Menu

The MODBUS SETUP menu allows setting of the system's Modbus port. It may function as a wired Modbus Slave or wireless Modbus Slave.

- **Wired Modbus Slave**
 - Allows the communication port to be polled by any Modbus Master device using the Modbus RTU protocol.
- **Wireless Modbus Slave**
 - Allows the communication port to be polled by any Modbus Master device using the Modbus RTU protocol.
 - May be used to transfer TXP-WCR Controller data to a Modbus master device such as a PC, PLC, DCS or even other TracXP Controllers.
 - Addressable which allows many TXP-WCR controllers to be connected to a single RS-485 cable.
 - A converter is available to make this port also compatible with Ethernet TCP/IP networks.

The entire Modbus database register list is documented in Section 5.1.1.

5.1.1 Modbus Register Summary

The following table identifies the available Modbus RTU register locations.

<u>Register Name</u>	<u>Register</u>	<u>Number of Values</u>	<u>Number of Registers Per Value</u>	<u>Description</u>
<u>Input Registers</u>				
Read with function code 4				
MBREG_CH1_BINARY_OUTPUT	31001 - 31032			Unsigned integer 800-4000
MBREG_VERSION	32002			Integer (version multiplied by 100)
CONTROLLER_NAME	32005 - 32010			12-character ASCII name
<u>Relay States</u>				
RELAY_1_STATE	32100 - 32107	8	1	0 = Not Energized, 1 = Energized
<u>Channel Data</u>				
BATTERY_VOLTAGE	33001 - 33064	32	2	32 floating points
FLOAT Value	33065 - 33128	32	2	32 floating points
VALUE_STRING	33129 - 33224	32	3	6-character ascii values
COMM_STATUS	33225 - 33256	32	1	0 = OK, 1 = Error, 2 = Connecting, 4 = Waiting for config
SENSOR_LIFE	33257 - 33288	32	1	0-100% Integer
COMM_TIMEOUT	33289 - 33320	32	1	
<u>Channel Flags</u>				
A1_STATUS	33449 - 33480	32	1	0 = No Alarm, 1 = Alarm
A2_STATUS	33481 - 33512	32	1	0 = No Alarm, 1 = Alarm
A3_STATUS	33513 - 33544	32	1	0 = No Alarm, 1 = Alarm
FAULT_STATUS	33545 - 33576	32	1	0 = No Fault, 1 = Fault
IN CAL	33577 - 33608	32	1	0 = Normal, 1 = In Cal
LOW_BATTERY	33609 - 33640	32	1	0 = Battery Ok, 1 = Low Battery

IN_CAL_PURGE	33641 - 33672	32	1	0 = Normal, 1 = In Cal Purge
IN_WARMUP	33673 - 33704	32	1	0 = Normal, 1 = In Warmup
EDIT_MODE	33705 - 33736	32	1	0 = Normal, 1 = Edit Mode Active
MISSING_SENSOR	33737 - 33768	32	1	0 = Normal, 1 = Missing Sensor
CAL_ERROR	33769 - 33800	32	1	0 = Normal, 1 = Cal Error
DATA_ERROR	33801 - 33832	32	1	0 = Normal, 1 = Data Error
CHANNEL_STATUS	33833 - 33864	32	1	0 = Normal, 1 = Any of the Following States: Low Battery, In Cal, In Cal Purge, Warmup, Edit Mode, Cal Error, Data Error

Channel Flag Bit Field Registers:

Bit0 = Channel 1, Bit31 = Channel 32

These should be read as 32bit unsigned integers. Byte order will affect these registers.

0 = State Inactive, 1 = State Active

PACKED_A1_STATUS	34000	1	2
PACKED_A2_STATUS	34002	1	2
PACKED_A3_STATUS	34004	1	2
PACKED_FAULT_STATUS	34006	1	2
PACKED_LOW_BATT	34008	1	2
PACKED_CAL	34010	1	2
PACKED_CAL_PURGE	34012	1	2
PACKED_WARMUP	34014	1	2
PACKED_EDIT_MODE	34016	1	2
PACKED_MISSING_SENSOR	34018	1	2
PACKED_CAL_ERROR	34020	1	2
PACKED_DATA_ERROR	34022	1	2
PACKED_CHANNEL_STATUS	34024	1	2
PACKED_CHANNEL_ENABLE	34026	1	2
PACKED_COMM_ERROR	34028	1	2

5.2 Wireless Modbus Option

NOTE: Having multiple controllers with Wi-Fi connected will cause problems with connection to Wi-Fi and the webpage. Only one can be completed at a time.

5.2.1 WIRELESS MODBUS SLAVE MODE

Wireless MODBUS allows one or many controllers to function as wireless Modbus slaves by:

1. Selecting Wireless MODBUS in the COMM SETUP menu (see WTA manual).

These wireless networks require a Modbus master such as:

- a DCS,
- HMI, or
- another TracXP Controller equipped with our compatible radio modem.

As in all TracXP wireless networks:

- One transceiver must be designated as Server and all others as Clients.
- No special configuration is required by the master or slave since this is a standard Modbus network.
- Radios must have the same Hop Channel and System ID settings to communicate.

The entire controller Modbus database, including registers and supported Function Codes, is documented in Section 5.1.

5.3 WiFi Communications Option

The Wi-Fi Communications option provides a webpage interface for viewing and editing the wireless system information—including all alarms and set points from the TXP-WTA being monitored.

Any web-enabled device with Wi-Fi capabilities may be used to access the controller's webpage.

To connect:

1. Search for the SSID of the controller in your device's WiFi connection menu and connect to it.
2. Open your device's web browser and enter the controller's IP address in your device's address bar. The Default IP address is "192.168.001.101"
3. On the next login menu, the user name is "admin" and the password is "controller32".

5.3.1 TXP-WCR Controller Wifi Menus

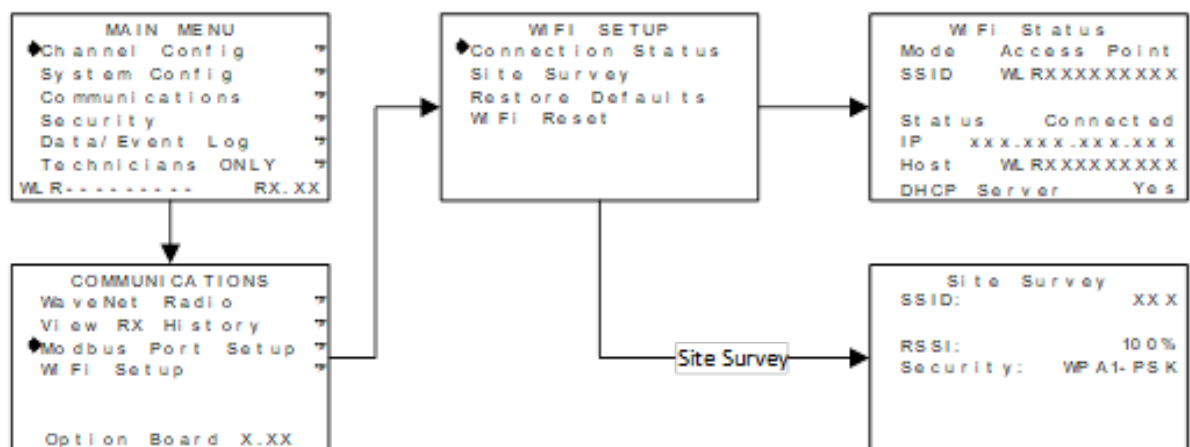


Figure 5-4 – Wifi Menu Tree

When accessing the controller via Wi-Fi, there are two modes of operation:

1. Controller as an Access Point
2. Controller as a Client.

By default, the controller will be set to Access Point. To change the controller to Client mode: Refer to Section 5.3.2.

Wi-Fi Menus

- Connection Status provides all of the Wi-Fi settings needed to access the controller's webpage.
- Mode displays whether the controller is set to Access Point or Client.
- SSID is the identification number of the Wi-Fi network for the controller.
- Status shows the current status of the Wi-Fi module.
- IP shows the IP Address for the webpage and is entered in the browser's address bar to view the controller on a web-enabled device.
- Host shows the host network for the controller. When acting as an Access Point this will match the SSID, and when acting as a Client it will display the SSID of the Host network.
- DHCP Server is a protocol which, when enabled, allows the host Server to assign the IP address to the device.

NOTE: All fields in the Connection Status menu can only be viewed on the TXP-WCR Controller and can be edited from the webpage (Section 5.3.2)

- Site Survey surveys the area for any available host networks and is useful in determining which network to use as the host network when connecting multiple TXP-WCR Controllers to a single Access Point. This will display the SSID of available networks in the area, the RSSI (signal strength) and the type of security protocol.
 - To cycle through the available networks:
 1. Select EDIT.
- Restore Defaults restores the Wi-Fi module to the default settings.

NOTE: After replacing a PCB with WiFi, defaults must be restored.

- Wi-Fi Reset resets the Wi-Fi module.

5.3.2 Webpage Menus

The main page for the TXP-WCR's Controller Webpage is the Status Page.

On this page, every active channel (1-32 channels) is displayed with their:

- Channel Number,
- Measurement Name, and
- Measurement Reading.

When no alarm condition is present:

- The display box for that channel is Green (Figure 5-4).

When a channel is in Alarm 1:

- The display box is yellow.

When a channel is in Alarm 2:

- The display box is red (Figure 5-5).

The relay display boxes indicate whether the relay is energized.

When the relay is not energized:

- The display box is white.

When the relay is energized:

- The display box is red.

NOTE: Any relay in Fail-safe mode will be shown in red during normal operations, and white when the alarm condition is present.

NOTE: Defaults settings for web page access are as follows:

IP: 192.168.1.101

Username: admin

Password: controller32

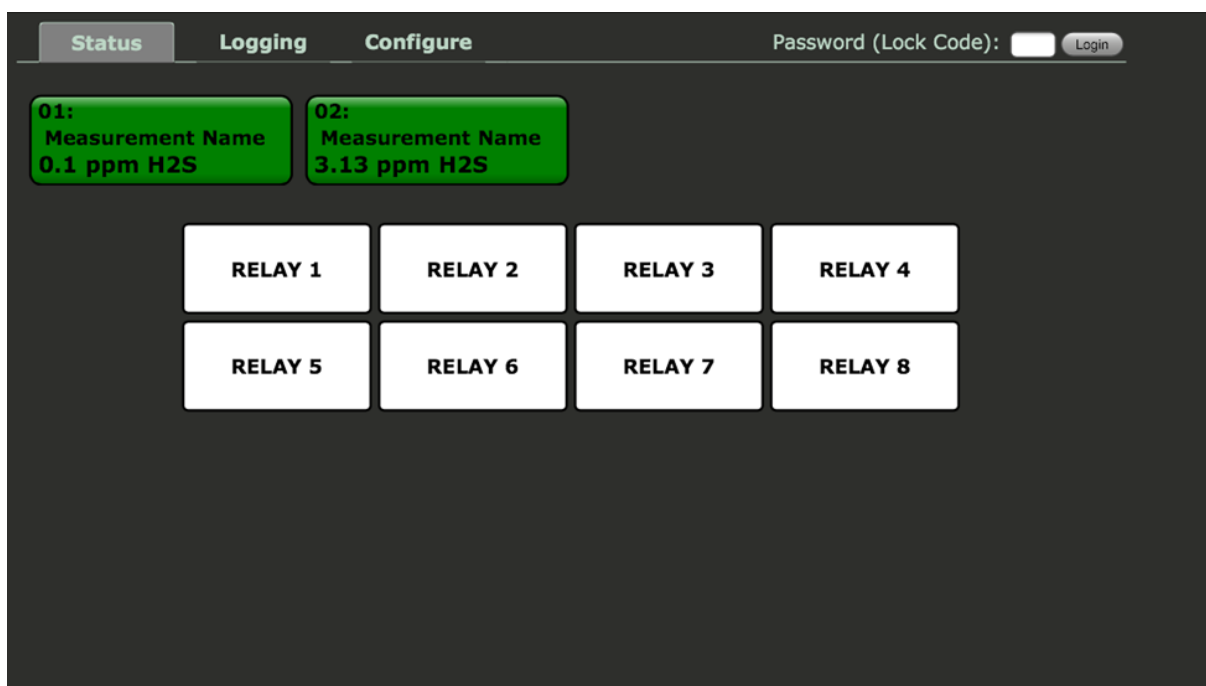


Figure 5-5 – Webpage Status Screen (No Alarms)

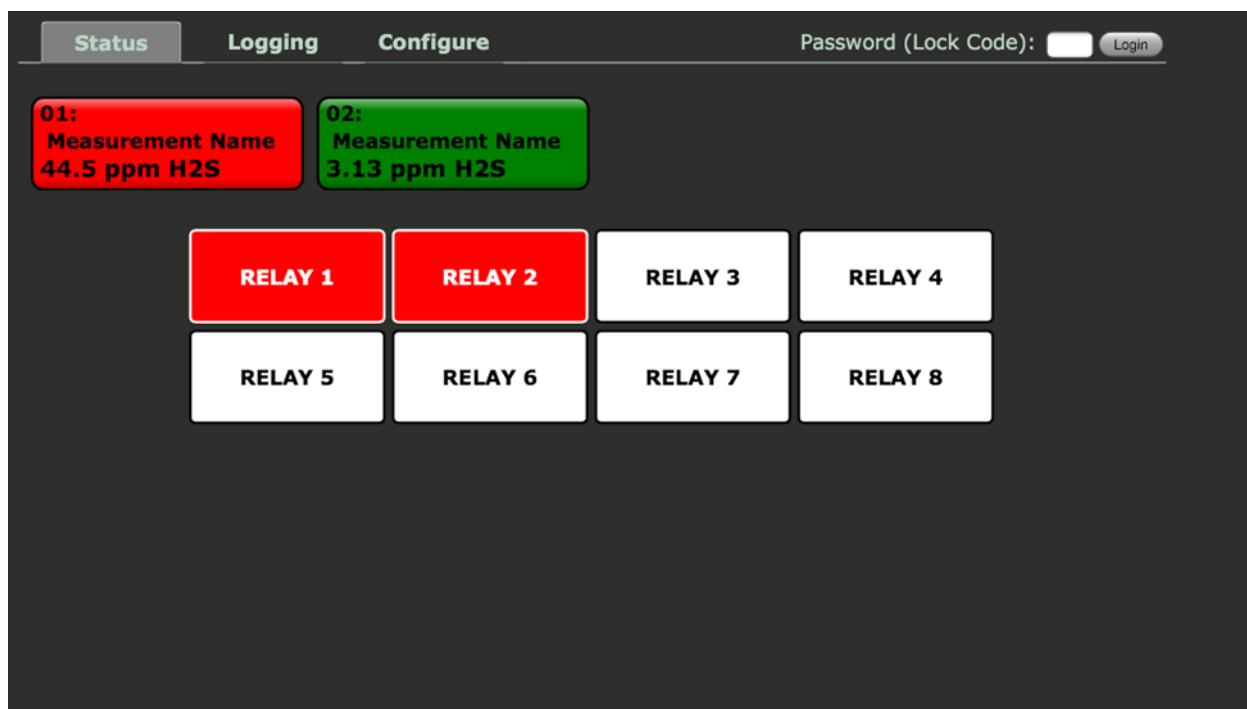


Figure 5-6 – Webpage Status Screen (with Alarms)

To reach the following Configuration Menus:

1. Enter the Password (Lock Code): 1234 and click Login in the upper right of the webpage.
2. Select the Configure tab at the top of the window.
3. Select the desired menu.

The Relay Config Menu (Figure 5-6) allows the user to change or view the settings for all 8 configurable relays of the controller.

To select the Relay to configure:

1. Use the drop-down menu in the upper left-hand corner.
2. Select what the relay will trip on.
3. Select Latching, Failsafe and/or Acknowledge options.

To provide zoning features, the Relay can be mapped to the desired channels using:

1. Selected Channels matrix on the right side of the screen.

To update the relay configuration:

1. Select the Save button at the bottom of the screen.

For detailed descriptions of the various relay settings, refer to Section 4.6.1.

Figure 5-7 – Relay Config Menu

The Channel Config Menu allows the user to activate or deactivate a channel using the Channel Active check box and/or change the channel's RTU ID number.

To select and edit the channel:

1. Use the drop-down box in the upper left corner of the screen.
2. The Channel Info is then displayed in the Channel Info window on the right side of the screen.
3. To save any changes select the Save button at the bottom of the screen.

For a detailed description of the Channel Config Menu options refer to Section 4.5.

Tag	Measurement Name
Eunits	ppm H2S
Comm Timeout (min)	
Range	0.000 To 100.000
Alarm 1 Setpoint	20.000
Alarm 2 Setpoint	40.000
Alarm 3 Setpoint	60.000
Fault Setpoint	-5.000

Figure 5-8 – Channel Config Menu

The System Config Menu (Figure 5-9) allows the user to:

- set the number of active channels,
- set the time and date,
- relay refresh,
- piezo refresh timers and enable/disable the local piezo, and
- complete the piezo function table as in Section 4.6.2.

For a more detailed description of the System Config Menu options refer to Section 4.6.

WARNING: CHANGING WI-FI CONFIGURATION WILL RESET THE NETWORK AND THIS PAGE WILL BECOME TEMPORARILY INACCESSIBLE. IF THE NEW SETTINGS ARE INVALID, THE NETWORK WILL NOT RESTART. IN THIS CASE, RESTORE DEFAULTS FROM THE WI-FI SETTINGS MENU ON THE CONTROLLER.

The Wi-Fi Config Menu may only be changed from the webpage (Figure 5-10) and allows the user to:

- Configure the Wi-Fi network for the controller as an Access Point or Client.

To view available Access Points:

1. A site survey must first be conducted from the TXP-WCR Controller.
2. Once the SSID of the desired access point is known the Wi-Fi mode may be switched to Client and the settings for the Access Point network entered in the appropriate fields.

An advantage to configuring multiple TXP-WCR Controllers to a single access point is that they can each be read using their unique IP address, however, only one Wi-Fi connection is necessary.

The screenshot displays the 'Configure' tab of the TXP-WCR Controller's web interface. At the top, there are tabs for 'Status', 'Logging', and 'Configure'. A 'Password (Lock Code):' field with a 'Login' button is visible. A prominent warning message states: 'WARNING: Changing WiFi configuration will reset the network and this page will become temporarily inaccessible. If the new settings are invalid, the network will not restart. In this case, restore defaults from the WiFi settings menu on the controller.'

The main configuration area is divided into two columns. The left column contains the 'Wifi Mode' section with a dropdown set to 'Access Point'. Below this are fields for 'Band' (802.11B), 'SSID' (WLR032014015), 'Channel Number' (Auto), and a checked 'DHCP Server Enabled' box. Further down are 'DHCP Start Address' (192.168.0.1) and 'DHCP End Address' (192.168.0.10). The 'Wifi Module Network' section follows, with 'Mode' set to 'Static IP', 'IP Address' (192.168.0.100), 'Subnet Mask' (255.255.255.0), and 'Default Gateway' (0.0.0.0). The 'Controller Network' section at the bottom has 'Mode' set to 'Static IP' and 'IP Address' (192.168.0.101). A 'Reset' button is located at the bottom right of this section.

The right column contains the 'Security' section with 'Authentication' set to 'Open/Shared' and 'Encryption' set to 'None'. Below this is the 'Advanced' section with 'Data Rate' set to '11M', a checked 'Broadcast SSID' box, and 'TX Power' set to '15'.

Figure 5-10 – Wifi Config Menu

The Serial Config Menu (Figure 5-11) allows the user to:

- Update the serial configuration settings.
- Set the Modbus radio settings for the controller.

Figure 5-11 – Serial Config Menu

5.4 Data Logging and USB Option

The Multi-Function Board (MFB) comes with onboard Flash memory for logging detailed data for the TXP-WCR Controller including channel readouts and events.

The data log files can be:

1. Copied from the Flash to a USB device.
2. Read as CSV files on a computer.
3. Read on a device via the webpage if the MFB is equipped with the Wi-Fi option.

NOTE: The YEAR in the file structure viewed on a flash drive is not a valid date. Folders must be saved to a computer HDD.

Data Logging File Structure

The Data Logging File structure is shown in Figure 5-12 below.

1. Select the file for the TXP-WCR Controller to be viewed.
2. The files are then stored by year, month and finally as individual CSV files for each day and the alarm log.
3. Opening the CSV file shows the list of readings for each channel for that day up to the point where the data log was uploaded to the memory device.

The data logger logs channel reading:

- Every 30 seconds when in alarm.
- Every five minutes when not in alarm.

The CSV files have a column for the time of the log and each active channel at that time and its reading. Each month has an evt.csv file which displays any events for that month.

For a detailed description of events see Section 4.9.1.

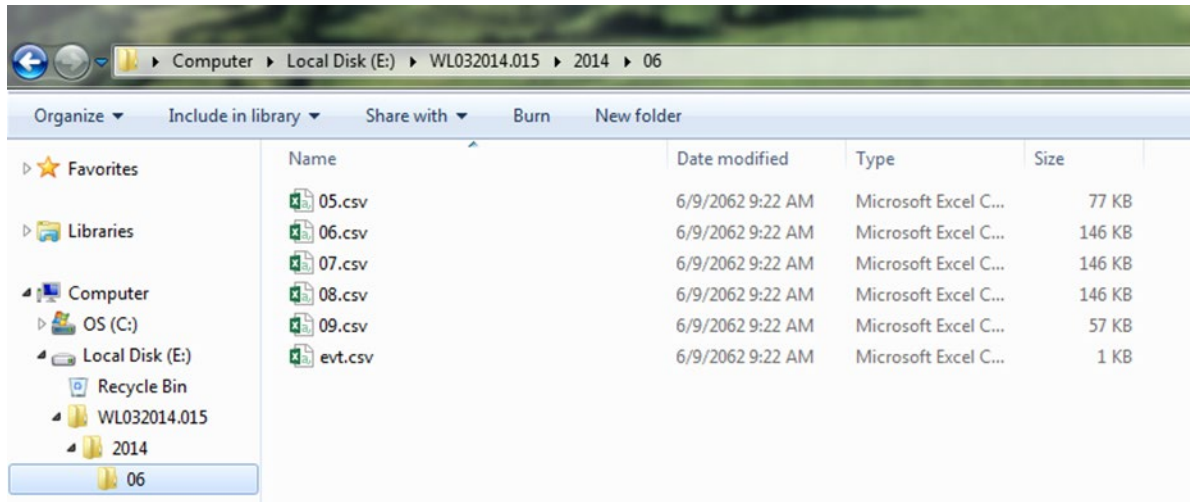


Figure 5-12 – Data Logging File Structure

5.4.1 TXP-WCR Controller Data Logging Menus

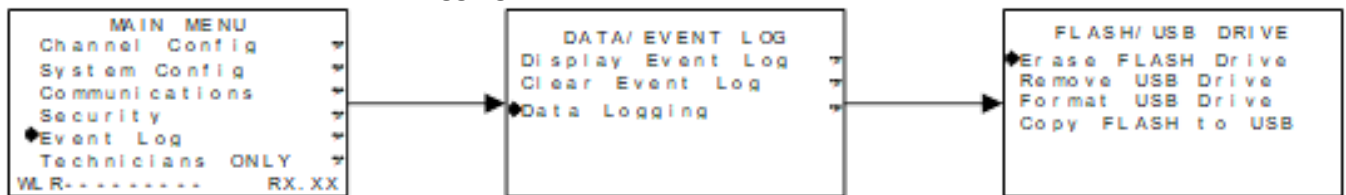


Figure 5-13 Data Logging Menu Tree

5.4.2 Webpage Data Logging Menus

To access the data logs via the webpage (see Figure 5-13):

1. Select the Logging tab at the top of the screen.
2. Select the desired controller, year, month and then either the event or day CSV file.
3. Select UP to move back.
4. Select REFRESH to update the files.

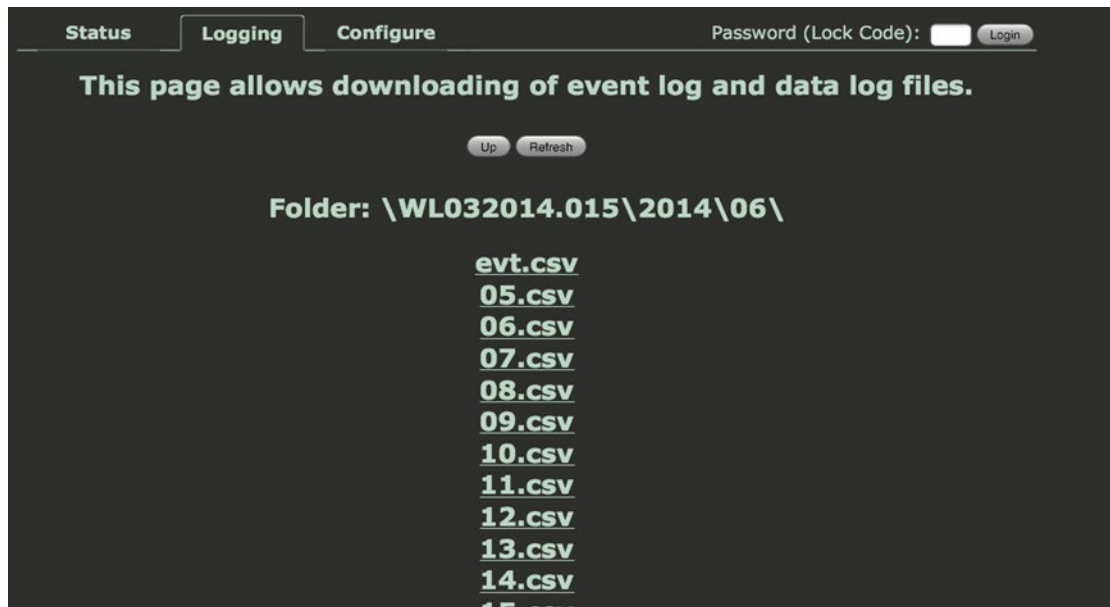


Figure 5-13 – Webpage Data Logging Menu

6 Controller PCB's

6.1 Motherboard Interface PCB

The controller motherboard shown below in Figure 6-2 is the interface between the Display / CPU assembly and all other system I/O devices.

Assembly

- The Display / CPU assembly attaches to the motherboard with 4-standoffs and connects via ribbon cable to S1.
- The optional Multi-Function option plugs into the P1 and P2 Motherboard option connectors.
- The P3 connector on the right side is for the Relay PCB.

Power Supply

- 24VDC Universal Input (100-240 VAC); Switching Power Supply with Up to 350mA Available at the TB3 Auxiliary Power Output Terminals
- TB1 provides terminals for DC power input
- TB2 offers field terminals for a remote alarm reset switch
- Includes Alarm Relays 1 and 2 (K1 and K2) and their indicating LEDs
- TB4 Provides Field Wiring Terminals for These Relays
- TB5 is for connection to the 100-240 VAC power source
- J2 is a 2-pin connector for powering the optional Piezo audible annunciator

Blocking diodes isolate internal and external DC supplies as shown in Figure 6-1.

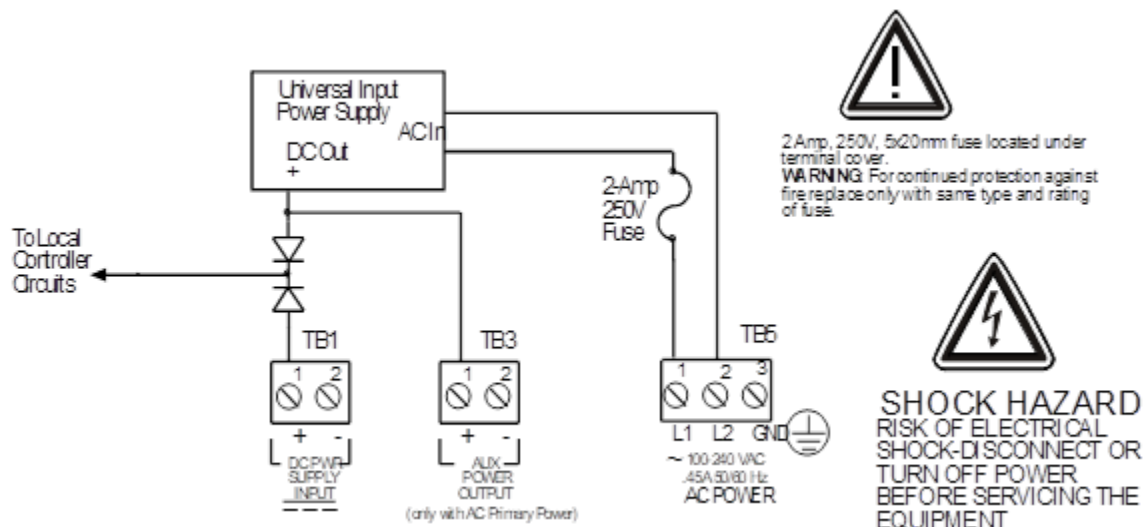


Figure 6-1 AC/DC Power Schematic

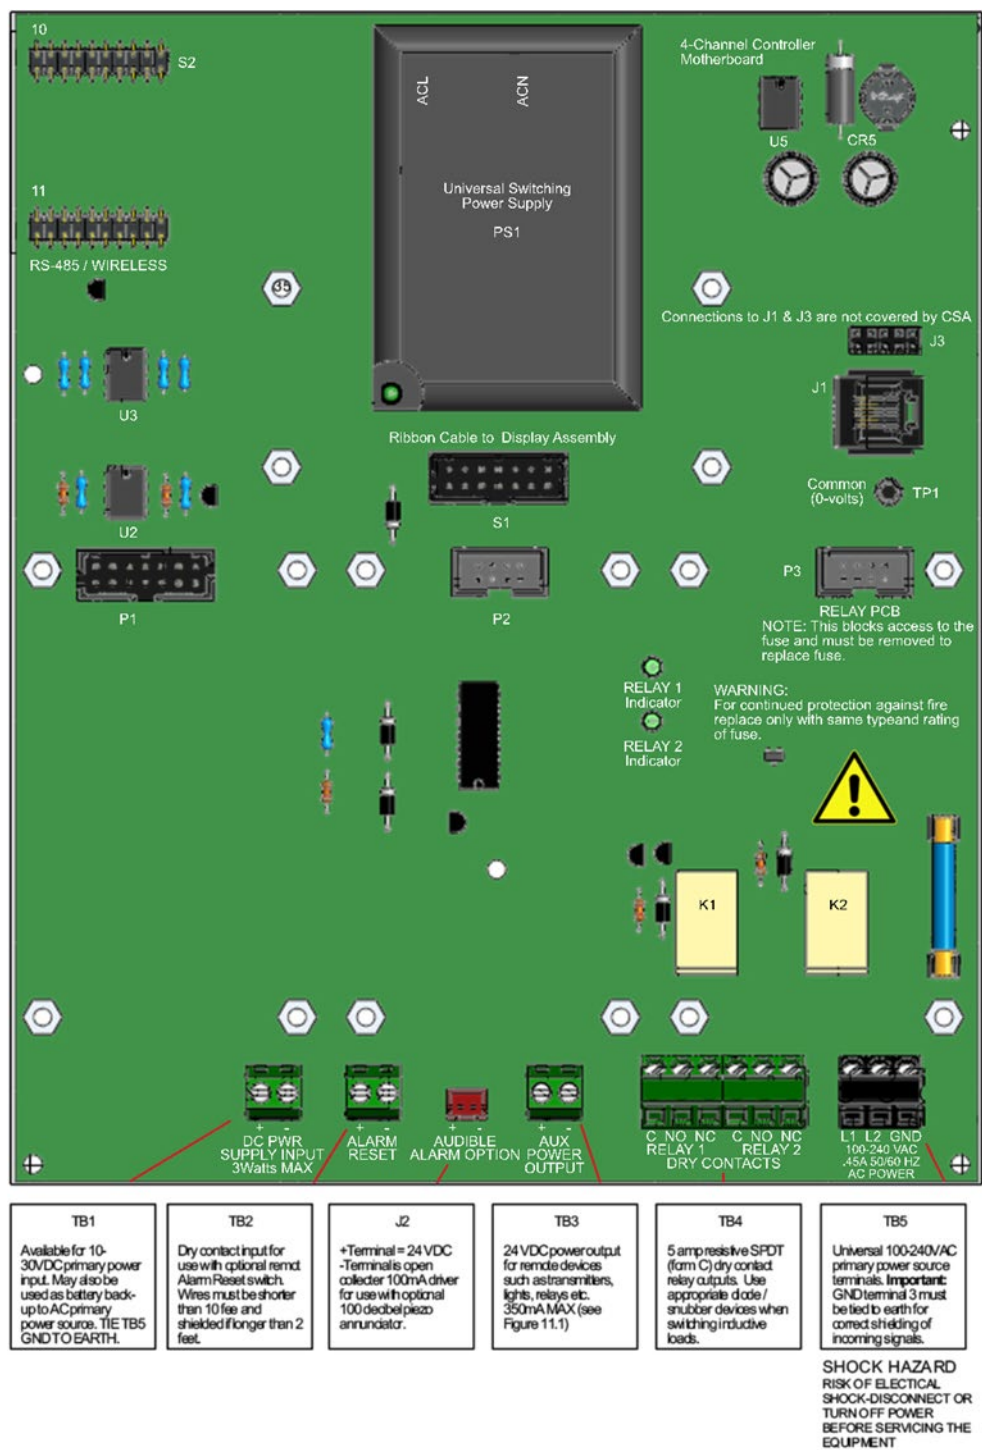


Figure 6-2 - Motherboard

6.2 Relay PCB

IMPORTANT: PCB MAY ONLY BE INSTALLED INTO MOTHERBOARD POSITION P3.

The Relay PCB, shown in Figure 6-3, adds six 5-amp form C relays. Each relay is programmable as described in Section 4.6.1.

All mechanical (dry contact) relays are rated at 5 Amp for 28 VDC and 250 ~VAC RESISTIVE loads.

IMPORTANT: APPROPRIATE DIODE (DC LOADS) OR MOV (AC LOADS) SNUBBER DEVICES MUST BE INSTALLED WITH INDUCTIVE LOADS TO PREVENT RFI NOISE SPIKES.

AC or DC power supplies to relays on the Relay PCB must be the same for each relay.

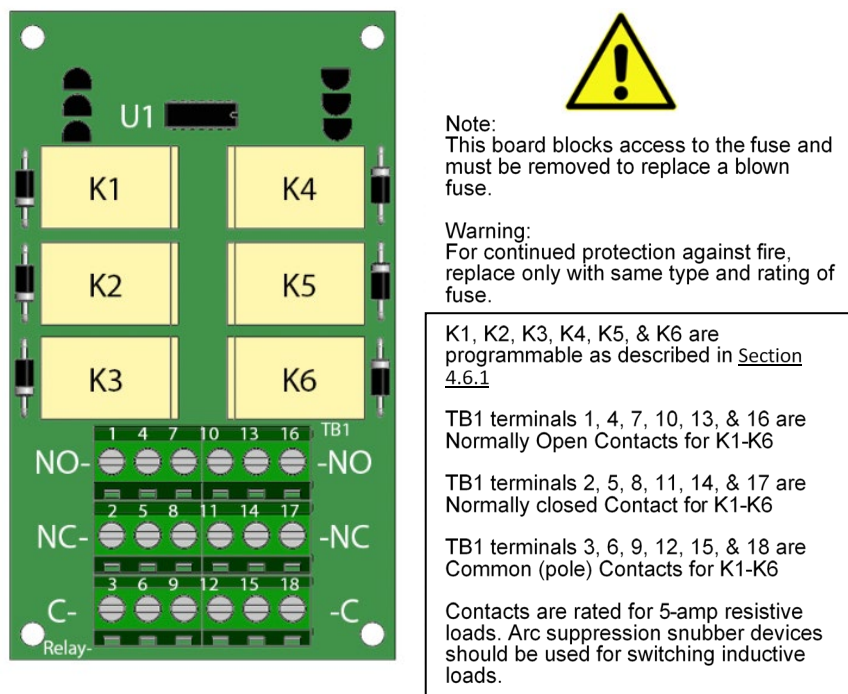


Figure 6-3 – Relay Board

6.3 Optional 24VDC 5-WATT Power Supplies

Some applications require 24VDC power in excess of the 10 watts supplied by the PS1 power supply located on the motherboard (see Figure 6-2).

Controller enclosures (Chapter 7) may be equipped with an optional din-rail mounted 50-watt power supply (see Figure 6-4). The integral 50-watt power supply is not available in the NEMA 7 explosion proof enclosures.

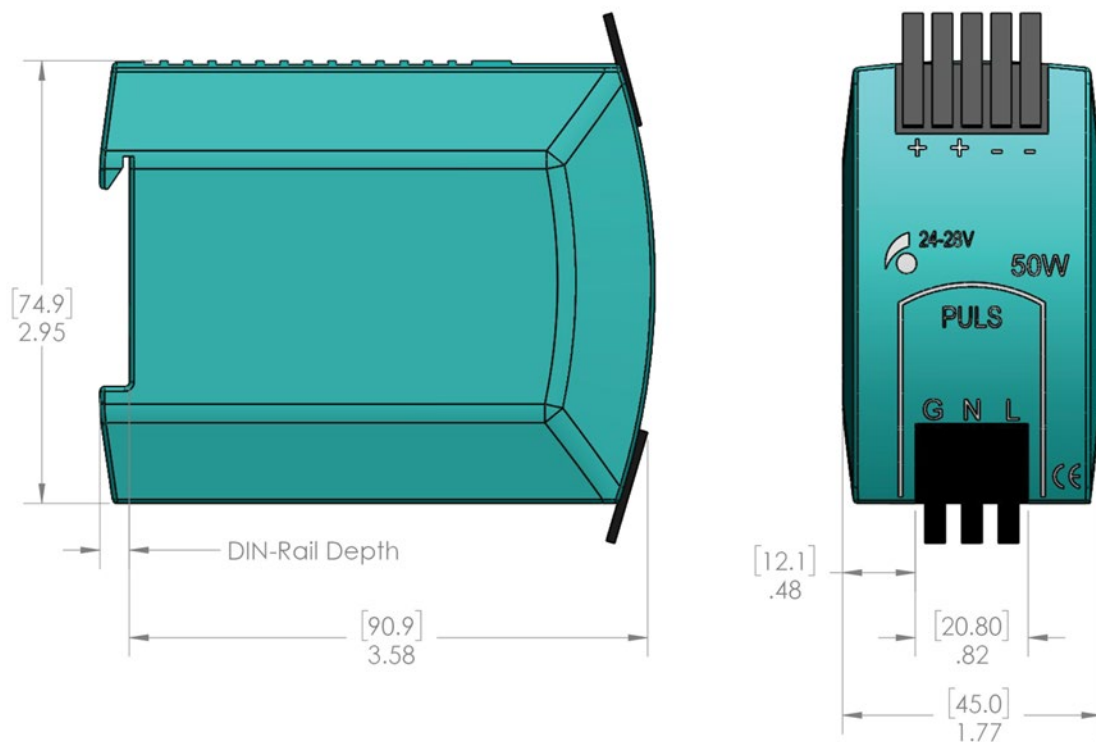


Figure 6-4 – 50-Watt Power Supply

7 TXP-WCR Controller Enclosure Options

7.1 NEMA 4x Polyester Wall Mount

The wall mount NEMA 4X enclosure is shown in Figure 7-1.

Non-metallic enclosures are not grounded by metal conduit. For internal ground points to be grounded to earth, the TB5 – 3 GND terminal must have a proper earth ground connection (see Figure 6-1).

Certifications:

- DIV 2 Groups A, B, C, D
- Category II
- Pollution degree 3
- NEMA 4X
- IP66

CAUTION: NONMETALLIC ENCLOSURES DO NOT PROVIDE GROUNDING BETWEEN CONDUIT CONNECTIONS. USE GROUNDING TYPE BUSHINGS AND JUMPER WIRES. ALL FIELD WIRING MUST HAVE INSULATION SUITABLE FOR AT LEAST 250V.

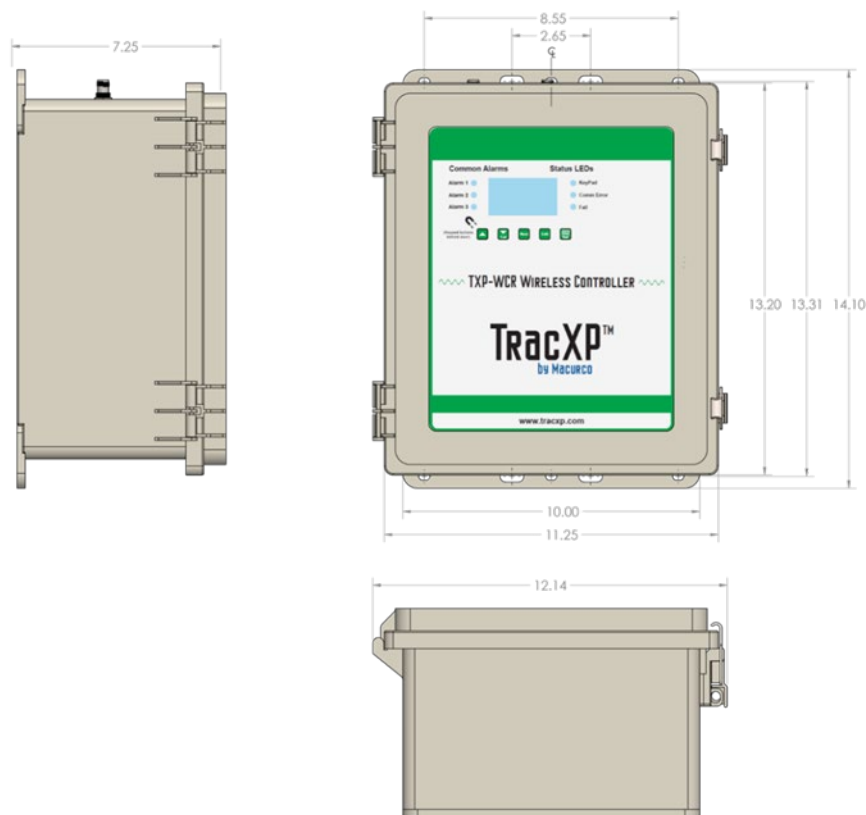


Figure 7-1 – NEMA 4x Polyester Wall Mount Enclosure

7.2 NEMA 4 Painted Carbon Steel Wall Mount

The mount shown in Figure 7-2 is a Painted Carbon Steel NEMA 4 wall mount enclosure designed for non-corrosive installations.

Certifications

- DIV 2 Groups A, B, C, D
- Category II
- Pollution degree 3
- NEMA 4
- P66

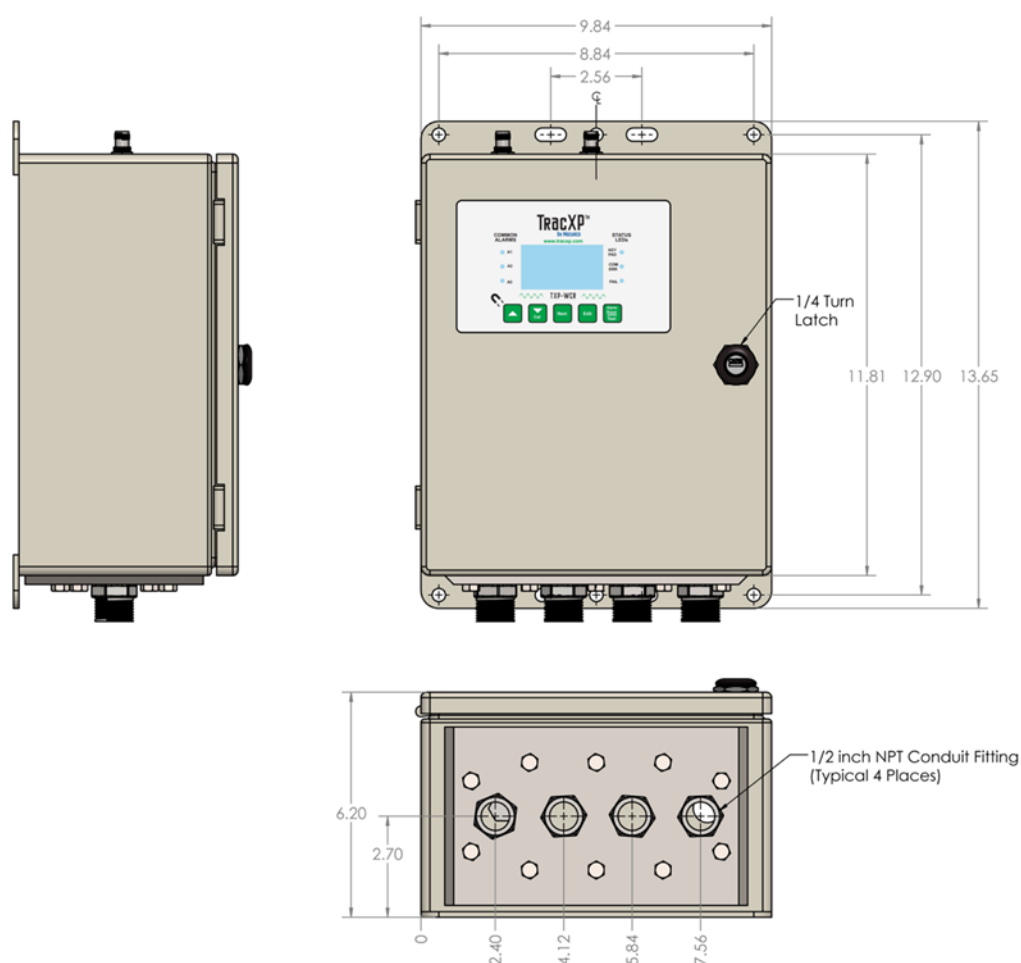


Figure 7-2 NEMA 4 Painted Carbon Steel Wall Mount Enclosure

7.3 NEMA 4x Stainless Steel Wall Mount

The mount shown in Figure 7-3 is a 316 Stainless Steel NEMA 4X wall mount enclosure designed for corrosive installations.

Certifications

- DIV 2 Groups A, B, C, D
- Category II
- Pollution degree 3
- NEMA 4X
- IP66

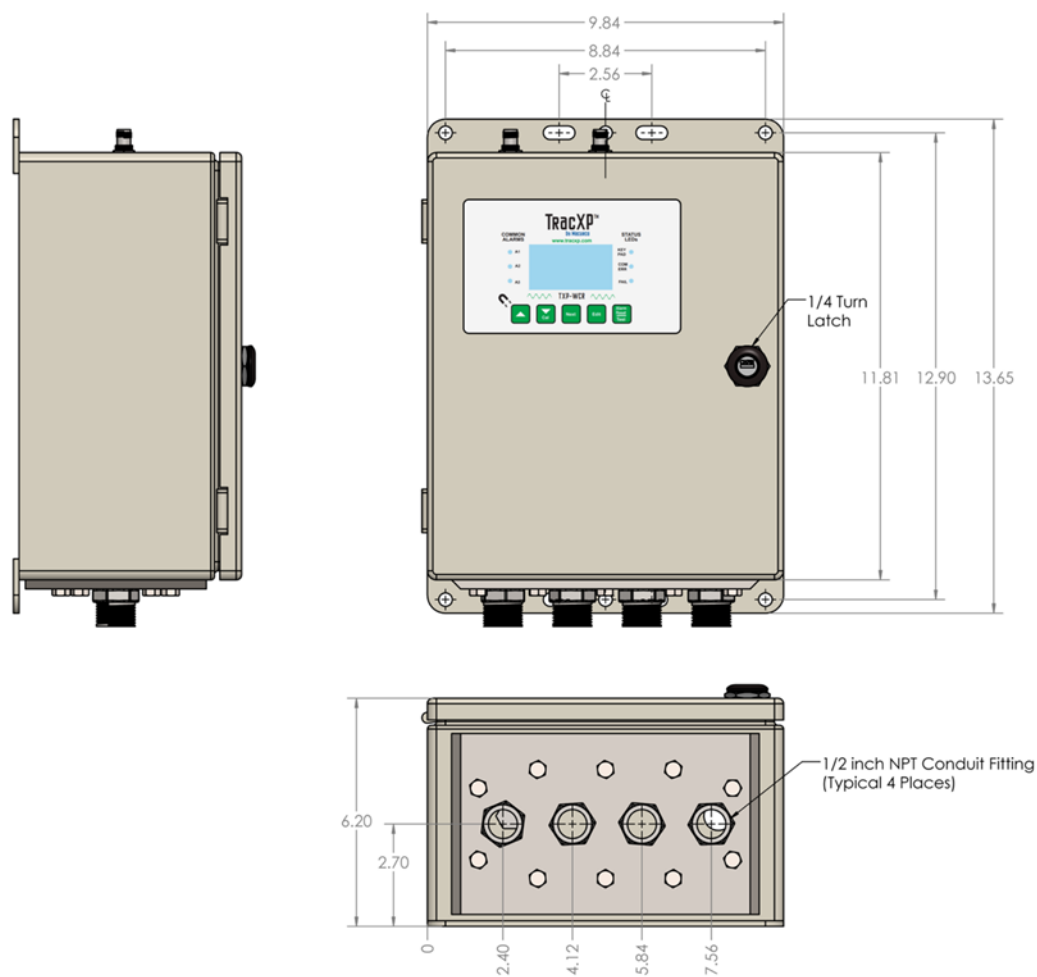


Figure 7-3 – NEMA 4x Stainless Steel Wall Mount Enclosure

7.4 NEMA 7 Explosion-Proof Wall Mount

The mount shown in Figure 7-4 is aluminum NEMA 7 wall mount enclosure designed for mounting into potentially hazardous areas.

NOTE: The rail mounted 50-watt Power Supply module is not available for this enclosure.

Certifications

- DIV 1 & 2 Groups B, C, D
- Includes 'O' Ring in door to satisfy NEMA 4 rating

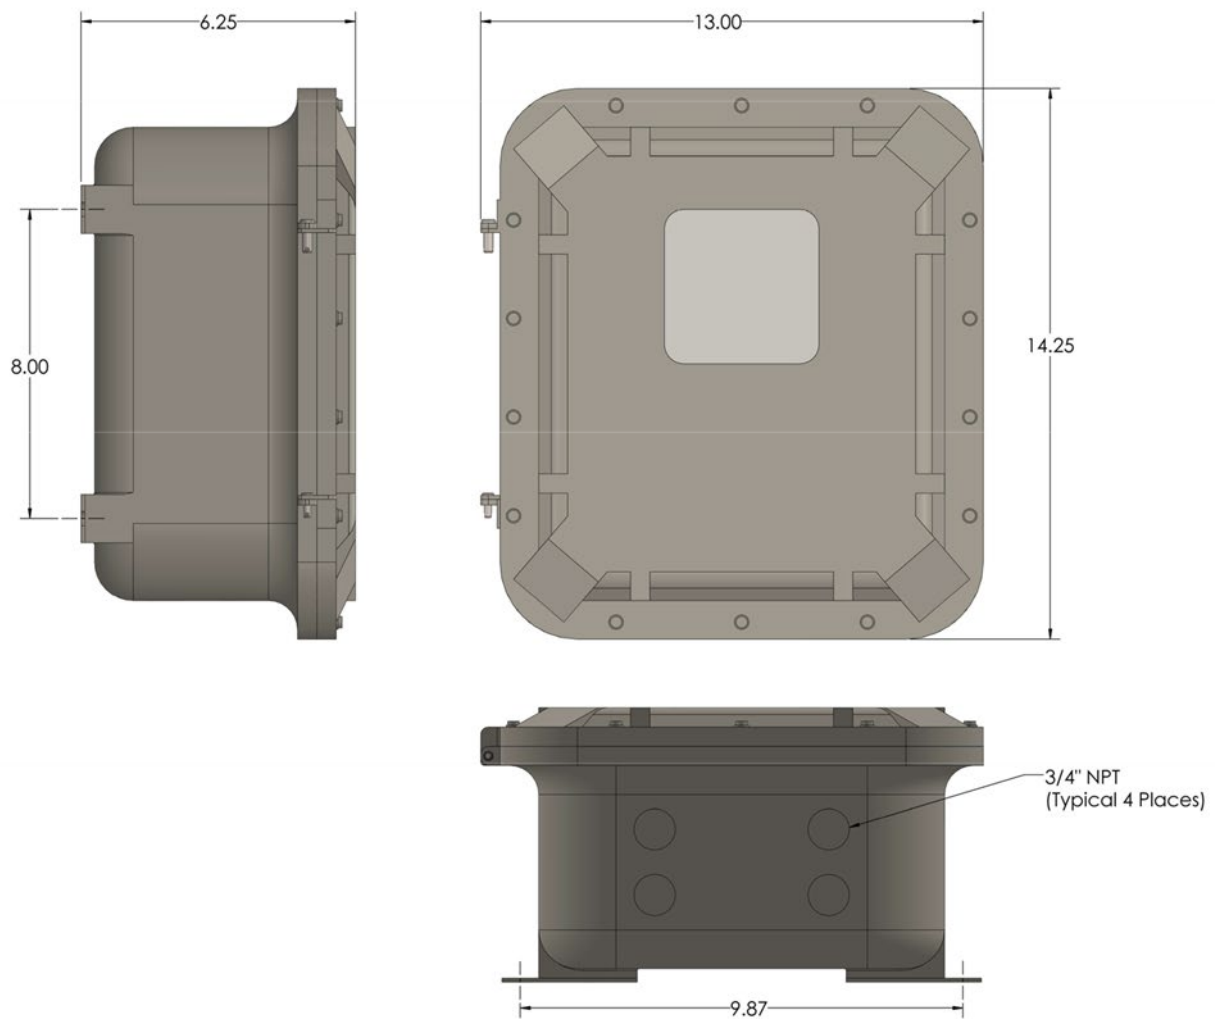


Figure 7-4 – NEMA 7 Explosion Proof Wall Mount Enclosure

8 TXP-WCR Antenna Selection

8.1 Antenna Selection

8.1.1 Dipole and Collinear Antennas

Key Qualities & Notes

- Connected to the Radio via a length of coax cable.
NOTE: If the cable is larger than 6mm diameter (1/4 inch), be aware of sideways tension on the connection. Thick cables have large bending radii and sideways force on the connector can cause a poor connection.
- The polarity of these antennas is the same as the main axis, and they are normally installed vertically.
- They can be mounted horizontally (horizontal polarity), however the antenna at the other end of the wireless link would need to be mounted perfectly parallel for optimum performance.
NOTE: This is very difficult to achieve over distance.
- If the antenna is mounted vertically, it is only necessary to mount the other antennas vertically for optimal “coupling” – this is easy to achieve.
- Dipole and collinear antennas provide best performance when installed with at least 1 to 2 wavelengths clearance of walls or steelwork.

The wavelength is based on the frequency:

- Wavelength in meters = $300 / \text{frequency in MHz}$
- Wavelength in feet = $1000 / \text{frequency in MHz}$

Antennas may be mounted with less clearance, but radiation will be reduced. If the radio path is short this won't matter. It is important the antenna mounting bracket to well connected to “earth” or “ground” for good lightning surge protection.

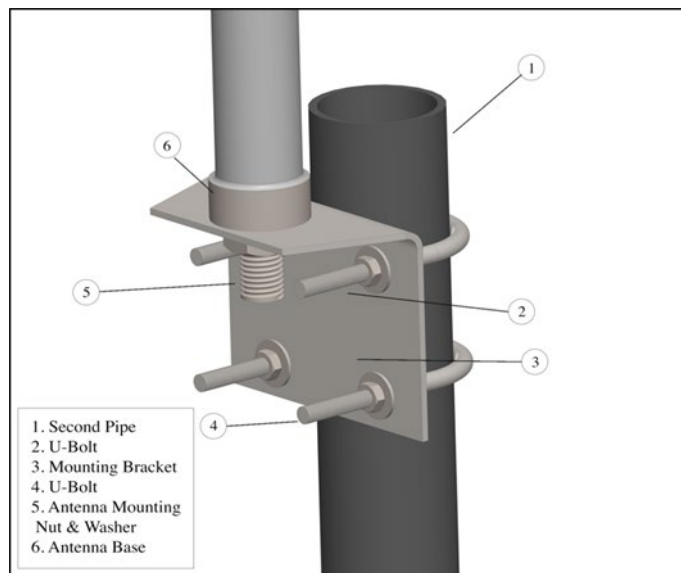


Figure 7-5 – Dipole Antenna Installation Diagram

8.1.2 Yagi Antennas

Key Qualities & Notes

- Directional along the central beam of the antenna.
- Folded element is located towards the back.
- Antenna should be pointed in the direction of the transmission.
- Should be mounted with at least 1 to 2 wavelengths of clearance from other objects.
NOTE: There is a large degree of RF isolation between horizontal and vertical polarity (approx. -30dB) so this installation method is a good idea if there is a large amount of interference from another system close by transmitting vertical polarity.
- The polarity of the antenna is the same as the direction of the orthogonal elements. For example, if the elements are vertical the Yagi transmits with vertical polarity.
- In networks spread over wide areas, it is common for a central unit to have an omni-directional antenna and the remote units to have Yagi antennas.
NOTE: In this case, as the omni-directional antenna will be mounted with vertical polarity, then the Yagi's must also have vertical polarity. Care needs to be taken to ensure the Yagi is aligned correctly to achieve optimum performance.
- Two Yagi antennas can be used for a point-to-point link.
NOTE: In this case, they can be mounted with the elements horizontally to give horizontal polarity.

IMPORTANT: A YAGI HAS DRAINAGE HOLES IN THE DIPOLE ELEMENT, DO NOT MOUNT THE ANTENNA WITH THE DRAINAGE HOLES UP.

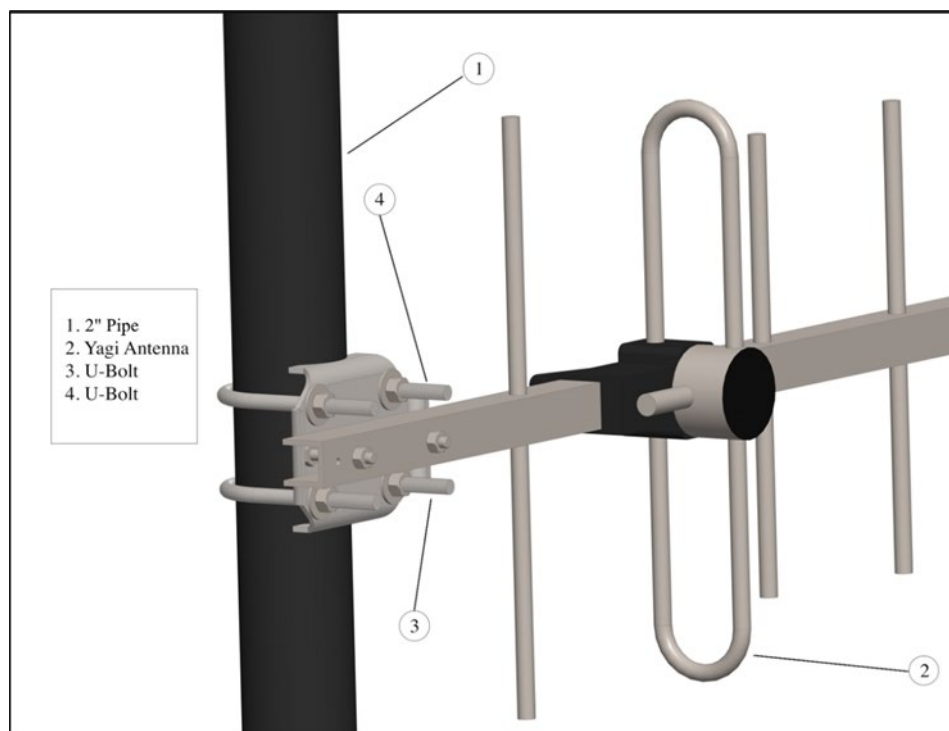


Figure 7-6 – Yagi Antenna Installation Diagram

8.1.3 Mounting Near Other Antennas

NOTE: Avoid mounting your network's antenna near any other antenna even when the other antenna is transmitting on a different radio band. High RF energy of the transmission from a close antenna can deafen a receiver. This is a common cause of problems with wireless systems.

1. Provide vertical separation between antennas for more efficient transmission
2. Mount beneath or above the other antenna if vertical separation is not possible.
3. Use different polarity to the other antenna, if possible, to isolate the RF coupling.

8.1.4 Coax Cables

Moisture ingress into a coax cable connection is the most common cause of problems with antenna installations. To weatherproof the connection:

A three-layer sealing process is recommended:

1. Add an initial layer of electrical PVC tape
2. Add a second layer of self-vulcanizing weatherproofing tape.
3. Add a final layer of electrical PVC tape.

Allowing a drip "U loop" of cable before the connection allows:

- water to drip off the bottom of the U instead of into the connection,
- reduces installation strain, and
- provides spare cable length in case later the original connectors need to be removed, - the cable can be cut back and new connectors fitted.

NOTE: Avoid installing coax cables together in long parallel paths. Leakage from one cable to another has a similar effect as mounting an antenna near another antenna.

8.2 Surge Protection & Grounding

Voltage surges can enter the Wireless System via:

- the antenna connections,
- power supply connections,
- connections to other equipment, and
- even the earth or ground connection.

Surges are electrical energy following a path to earth and the best protection is achieved by draining the surge energy to earth via an alternate path.

Wireless devices need to have a solid connection to earth via:

- a ground stake, or
- ground grid if the soil has poor conductivity.

Solid connection means a large capacity conductor (not a small wire) with no coils or sharp bends. All other devices connected to the controller need to be grounded to the same ground point. There can be significant resistance between different ground points leading to very large voltage differences during lightning activity. As many wireless units are damaged by earth potential surges due to incorrect grounding as direct surge voltage.

It is very difficult to protect against direct lightning strikes but the probability of a direct strike at any one location is very small. Unfortunately, power line surges and electromagnetic energy in the air can induce high voltage surges from lightning activity several miles away.

8.2.1 Antenna Grounding

Electromagnetic energy in the air will be drained to ground via any and every earth path. An earth path exists between the antenna and the WTA, and to protect against damage this earth path current must be kept as small as possible.

This is achieved by providing better alternate earth paths.

1. Ground the antenna to the same ground point as the WTA.

Surge energy induced into the antenna will be drained:

1. by the mount's ground connection,
2. by the outside shield of the coax cable to the ground connection on the radio, and
3. by the internal conductor of the coax cable via the radio electronics.
 - This third earth path causes damage unless the other two paths provide a better earth connection allowing surge energy to bypass the electronics.

When an antenna is located outside of a building and outside of an industrial plant environment, external coax surge diverters are recommended to further minimize the effect of surge current in the inner conductor of the coax cable.

Coax surge diverters have gas-discharge element which breaks down in the presence of high surge voltage and diverts any current directly to a ground connection. A surge diverter is not normally required when the antenna is within a plant or factory environment, as the plant steelwork provides multiple parallel ground paths and good earth grounding will provide adequate protection without a surge diverter.

8.2.2 Connections to Other Equipment

Data devices connected to the wireless unit should be well grounded to the same ground point as the wireless unit. Surges can enter the wireless unit from connected devices, via:

- I/O
- Serial
- ethernet connections

Special care needs to be taken where the connected data device is remote from the wireless unit requiring a long data cable. As the data device and the wireless unit cannot be connected to the same ground point, different earth potentials can exist during surge conditions:

1. Fit surge diverters to the data cable to protect against surges entering the wireless unit.
2. Fit surge diverters for the I/O wiring to protect the wireless unit from surge voltages being induced on long lengths of wire from nearby power cables.

9 TXP-WTA Legacy Mode

TXP-WCR Controllers are not compatible with TXP-WTA Sensor Assemblies in legacy mode.

When using a TXP-WTA with other TracXP products, it is necessary to operate wirelessly in Legacy Mode.

To enter Legacy mode:

1. Enter the RF Link Menu discussed in the WTA manual.

To switch from Wireless mode to Legacy mode:

1. Select RF Link.
2. Enter the special key sequence of four UP keystrokes.
3. Enter the appropriate Hop Channel and System ID in accordance with your Server's Network Configuration.

All other WTA settings function as discussed in the WTA manual.



10 Optional Add-ons

Explosion-Proof Antenna



Power Supply

PN: 83-800K-0000-00



Radio


PN: 83-8001-0000-00



Alarm (Light)



Controller Multifunction Option Board

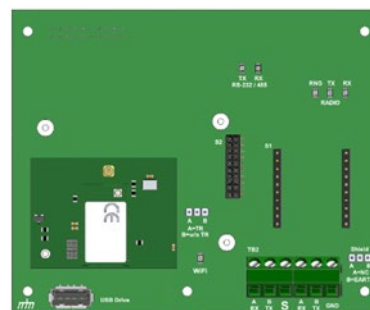

11 Appendix A – Table of Figures

Figure 3-1 – NEMA 4 Enclosure / Steel Enclosure	10
Figure 3-2 – External System Diagram	11
Figure 3-3 – LCD Board	12
Figure 3-4 – Relay Board.....	12
Figure 3-5 – Motherboard	13
Figure 3-5 – Assembly Diagram	14
Figure 3-7 – Front Panel	16
Figure 3-8 – Display PCB	16
Figure 3-9 – Data Displays	17
Figure 3-10 – EUNIT / Bar Graph Screen	18
Figure 3-11 – Event Log Screen	19
Figure 4-1 – Menu Tree	21
Figure 4-2 – Main Menu	22
Figure 4-3 – Channel Config Menu	23
Figure 4-4 – System Config Menu.....	24
Figure 4-5 – Configure Relays Menu	25
Figure 4-6 – Select Channels Screen.....	25
Figure 4-7 – Piezo Functions.....	26
Figure 4-9 – Communication Menus	27
Figure 4-10 – Radio Menus.....	27
Figure 4-11 – RX History	29
Figure 4-12 – Security Menu	29
Figure 4-13 – Display Event Log Pages	31
Figure 4-14 – Flash / USB Drive Menu.....	31
Figure 4-15 – Technicians Only Pages	32
Figure 5-1 – Multi-Interface Option Board Menus.....	33
Figure 5-2 – Multifunction Option Board	33
Figure 5-3 – Modbus Communication Menu	34
Figure 5-4 – Wifi Menu Tree.....	36
Figure 5-5 – Webpage Status Screen (No Alarms)	38

Figure 5-6 – Webpage Status Screen (with Alarms)	38
Figure 5-7 – Relay Config Menu	39
Figure 5-8 – Channel Config Menu	40
Figure 5-10 – Wifi Config Menu.....	41
Figure 5-11 – Serial Config Menu	42
Figure 5-12 – Data Logging File Structure	43
Figure 5-13 Data Logging Menu Tree	43
Figure 5-13 – Webpage Data Logging Menu	44
Figure 6-1 AC/DC Power Schematic	45
Figure 6-2 - Motherboard.....	46
Figure 6-3 – Relay Board.....	47
Figure 6-4 – 50-Watt Power Supply.....	48
Figure 7-1 – NEMA 4x Polyester Wall Mount Enclosure	49
Figure 7-2 NEMA 4 Painted Carbon Steel Wall Mount Enclosure	50
Figure 7-3 – NEMA 4x Stainless Steel Wall Mount Enclosure	51
Figure 7-4 – NEMA 7 Explosion Proof Wall Mount Enclosure.....	52
Figure 7-5 – Dipole Antenna Installation Diagram	53
Figure 7-6 – Yagi Antenna Installation Diagram	54

12 Macurco Gas Detection Product limited warranty

Macurco warrants the TXP-WCR gas detector will be free from defective materials and workmanship for a period of two (2) years from the date of manufacture, provided it is maintained and used in accordance with Macurco instructions and/or recommendations. If any component becomes defective during the warranty period, it will be replaced or repaired free of charge, if the unit is returned in accordance with the instructions below. This warranty does not apply to units that have been altered or had repair attempted, or that have been subjected to abuse, accidental or otherwise. The above warranty is in lieu of all other express warranties, obligations or liabilities. THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE ARE LIMITED TO A PERIOD OF TWO (2) YEARS FROM THE PURCHASE DATE. Macurco shall not be liable for any incidental or consequential damages for breach of this or any other warranty, express or implied, arising out of or related to the use of said gas detector. The manufacturer or its agent's liability shall be limited to replacement or repair as set forth above. Buyer's sole and exclusive remedies are the return of the goods and repayment of the price, or repair and replacement of non-conforming goods or parts.

Macurco Gas Detection

3601 N. St. Paul Avenue
Sioux Falls, SD 57104

Technical Support Contact Information

Phone: 1-844-325-3050

Fax: 1-605-951-9616

Email: support@tracxp.com

Website: www.tracxp.com/support/

General Contact Information

Phone : 1-877-367-7891

Fax : 1-605-951-9616

Email: info@tracxp.com

Website: www.tracxp.com

Rev - 1.3

Issue Date: 8-18-2020

Document No: 34-2900-0207-9

© Aerionics 2020. All rights reserved.

Macurco is a trademark of Aerionics, Inc.

